

700 Series Managed Industrial Ethernet Switch

User Manual & Installation Guide

1884-090805


(Revised 8/5/2009) Page 1 of 133


708TX, 708FX2, 708FXE2, 716TX, 716FX2, and 716FXE2 Industrial Ethernet Switch Installation Guide	4
SAFETY WARNINGS	6
Installation	7
Connecting the Unit	13
Overview of Advanced Features	
Mode of Operation	
Port Mirroring	
Port Trunking	
Priority Tagging (QoS)	
Virtual LAN	
Rapid Spanning Tree Protocol	
SNMP Traps	
IGMP Snooping	
N-Ring	
N-Link	
DHCP	
DHCP Client	
DHCP Relay Agent	
DHCP Server	
Web Software Configuration	
Web Management	
Web Management - Home	
Administration – System	
Administration – System Administration – SNMP	
Administration – Sault	
DHCP – Server – Setup Profiles	
DHCP – Server – Setup Fromes	
DHCP – Server – View Bindings	
DHCP – Server – View Britaings	
Ports – Configuration	
Ports – Mirroring	
Ports – Trunking	
Statistics – Port Statistics	
Statistics – Port Utilization.	
VLAN – Configuration	
Bridging – Aging Time	
Bridging – Aging Time Bridging – Unicast Addresses	
Bridging – Unicast Addresses Bridging – Multicast Addresses	
Bridging – Multicast Addresses Bridging – Show MAC by Port	
RSTP - Configuration	
IGMP - Configuration	
IGMP – Show Group and Show RouterIGMP – RFilter	
N-View – Configuration	
N-Ring – Configuration	
N-Ring – Advanced Configuration	
N-Link – Configuration	
N-Link – Status	
Firmware/Config – TFTP.	
Support – Web Site and E-mail	
BPCL – Broadcast Packet Count Limit Configuration	
User Management – Adding Users	
User Management – Removing Users	
LogicalView	
Configuration – Save or Reset	
Help – DHCP	
Help – Ports	
Help – Statistics	95


Help – VLAN	
Help – BPCL	
Help – IGMP	
Help – Bridging	
Help – RSTP	
Help – Firmware/Config	
Help – User Management	
Help – N-View	
Help – N-Ring	
Help – N-Link	
Help – Other	
CLI Commands	
"?" (Help)	
Logout	
Show, Add, or Delete ARL Entries	
Save or Reset the Configuration Settings	
Show or Set IGMP Configuration	
Show or Set Mirror Configuration	
Show or Set N-Ring Configuration	
Show or Set N-View Configuration	
Ping a Host	
Show or Set Port Configuration	
Reset the Switch	
Show or Set SNMP Configuration	
Show or Clear the Last System Error	
Show System Information	
Set or Show the System IP Configuration	
Show or Set System Configuration	
VLAN Addition and Deletion Example	
VLAN Configuration Examples	
Example 1 – Basic understanding of port-based VLANs	
Example 2 – Basic understanding of tagged VLANs (Admit – Tagged Only)	125
Example 3 – Basic understanding of tagged VLANs (Admit – All)	
Example 4 – Basic understanding of Hybrid VLANs	
Example 5 – Basic understanding of Overlapping VLANs	128
Example 6 – Basic understanding of VLANs with Multicast Filtering	129
KEY SPECIFICATION – 708TX, 708FX2, 708FXE2	130
KEY SPECIFICATION – 716TX, 716FX2, 716FXE2	
N-TRON Limited Warranty	133




708TX, 708FX2, 708FXE2, 716TX, 716FX2, and 716FXE2 Industrial Ethernet Switch Installation Guide

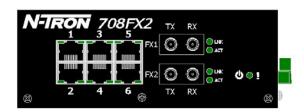

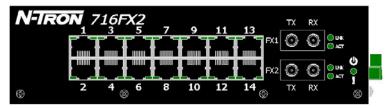

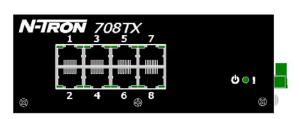

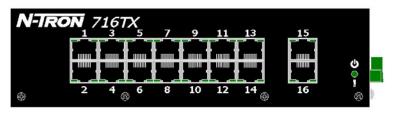

The N-TRON 700 Series Industrial Ethernet Switch offers outstanding performance and ease of use. It is ideally suited for connecting Ethernet enabled industrial and or security equipment and is a fully managed switch.

PRODUCT FEATURES

- Full IEEE 802.3 Compliance
- Eight 10/100 BaseTX RJ-45 Ports (708TX)
- Six 10/100 BaseTX RJ-45 Ports and two 100BaseFX(E) Ports (708FX2 and 708FXE2 models only)
- Extended Environmental Specifications
- Autosensing 10/100BaseTX, Duplex, and MDIX
- Offers Rapid Spanning Tree Protocol
- Trunk with other N-Tron trunking capable switches over two ports
- Store & Forward Technology
- Plug and Play IGMP Support
- Rugged Din-Rail Enclosure
- Redundant Power Inputs (10-30 VDC)
 - o –HV High Voltage Option (40-160VDC)
- SNMP v1, v2 and v3.
- Web Browser Management with detailed ring map and fault location charting.
- Web Browsing and N-View Switch Monitoring

PRODUCT CONFIGURATIONS

- 708TX Eight 10/100 Base-TX RJ45 Copper Ports
- 708FX2-XX Six 10/100 Base-TX RJ45 Copper Ports, two multimode 100BaseFX Ports
- 708FXE2-XX-YY Six 10/100 Base-TX RJ45 Copper Ports, two singlemode 100BaseFX Ports
- 716TX-VV Sixteen 10/100 Base-TX RJ45 Copper Ports
- 716FX2-XX-VV Fourteen 10/100 Base-TX RJ45 Copper Ports, two multimode 100BaseFX Ports
- 716FXE2-XX-YY-VV Fourteen 10/100 Base-TX RJ45 Copper Ports, two singlemode 100BaseFX Ports

Where: XX = ST or SC; YY = 10, 40 or 80 for Singlemode, Blank for Multimode; E = Singlemode, Blank Otherwise; VV = HV for High voltage, Blank for Standard voltage

MANAGEMENT FEATURES

- IGMP Snooping
- VLAN
- QoS
- Trunking
- Mirroring
- 802.1D-2004 Rapid Spanning Tree
- N-RINGTM (N-Tron proprietary Ring Management)
- N-LINKTM (N-Tron proprietary Coupling Management)
- DHCP Server, Option 82 relay

REGULATORY CERTIFICATIONS











708 Series only

708 Series only

(Revised 8/5/2009) Page 4 of 133

Copyright, © N-Tron Corp., 2008-2009 820 S. University Blvd., Suite 4E Mobile, AL 36609 USA

All rights reserved. Reproduction, adaptation, or translation without prior written permission from N-Tron Corp. is prohibited, except as allowed under copyright laws.

Ethernet is a registered trademark of Xerox Corporation. All other product names, company names, logos or other designations mentioned herein are trademarks of their respective owners.

The information contained in this document is subject to change without notice. N-Tron Corp. makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability or fitness for a particular purpose. In no event shall N-Tron Corp. be liable for any incidental, special, indirect, or consequential damages whatsoever included but not limited to lost profits arising out of errors or omissions in this manual or the information contained herein.

Warning

Do not perform any services on the unit unless qualified to do so. Do not substitute unauthorized parts or make unauthorized modifications to the unit.

Do not operate the unit with the top cover removed, as this could create a shock or fire hazard.

Do not block the air vents on the sides or the top of the unit.

Do not operate the equipment in the presence of flammable gasses or fumes. Operating electrical equipment in such an environment constitutes a definite safety hazard.

Do not operate the equipment in a manner not specified by this manual.

(Revised 8/5/2009) Page 5 of 133

SAFETY WARNINGS

GENERAL SAFETY WARNINGS

WARNING: If the equipment is used in the manner not specified by N-Tron Corp., the protection provided by the equipment may be impaired.

LASER SAFETY (708FXE2 Models -40, -80, 716FXE2 Models -40, -80)



CAUTION: CLASS 1 LASER PRODUCT. Do not stare into the laser!

Contact Information

N-Tron Corp. 820 South University Blvd. Suite 4E

Mobile, AL 36609 TEL: (251) 342-2164 FAX: (251) 342-6353

WEBSITE: www.n-tron.com

E-MAIL: N-TRON_Support@n-tron.com

ENVIRONMENTAL SAFETY



WARNING: Disconnect the power and allow to cool 5 minutes before touching.

ELECTRICAL SAFETY





Must be used with listed UL Industrial Power Supply.

WARNING: Disconnect the power cable before removing the top cover.

WARNING: Do not operate the unit with the any cover removed.

WARNING: Do not work on equipment or cables during periods of lightning activity.

WARNING: Do not perform any services on the unit unless qualified to do so.

WARNING: Do not block the air vents.

WARNING: Observe proper DC Voltage polarity when installing power input cables. Reversing voltage polarity can cause permanent damage to the unit and void the warranty.

(Revised 8/5/2009) Page 6 of 133

Hazardous Location Installation Requirements

- 1. This equipment is suitable for use in Class I, Div. 2, Groups A, B, C, D or non-hazardous locations only.
- 2. **WARNING:** Explosion Hazard Substitution of components may impair suitability for Class I, Div. 2.
- 3. **WARNING:** Explosion Hazard do not disconnect while circuit is live, unless area is known to be non-hazardous.
- 4. **WARNING:** Explosion Hazard do not replace the device unless power has been switched off or the area is known to be non-hazardous.
- 5. Use 60/75°C rated Copper wire for 708 and 90°C or higher for 716, (0.22Nm) 2lb/in Tightening torque for field installed conductors.

Please make sure the 700 Series Ethernet Switch package contains the following items:

- 1. 700 Series Switch
- 2. Product CD

Contact your carrier if any items are damaged.

Installation

Read the following warning before beginning the installation:

WARNING



Never install or work on electrical equipment or cabling during periods of lightning activity. Never connect or disconnect power when hazardous gasses are present.

Disconnect the power cable before removing any enclosure panel.

UNPACKING

Remove all the equipment from the packaging, and store the packaging in a safe place. File any damage claims with the carrier.

CLEANING

Clean only with a damp cloth.

(Revised 8/5/2009) Page 7 of 133


ATEX Installation Requirements

- 1. The conductor size of the phase conductor must be in the range of 0.05-2.08 mm2.
- 2. Field wiring must be suitable for a minimum of 110°C.
- 3. Ethernet Switches are intended for mounting in an IP54 enclosure in a pollution degree 2 environment.
- 4. Temperature testing of the Ethernet Switches was conducted on the switch itself in an 85°C aircirculating oven and resulted in a Temperature Code of T4. However, end-product temperature testing shall be considered.
- 5. The end user shall provide bonding means as necessary. All bonding equipment (components) shall be evaluated according to EN 60079-15:2005 and covered by a component certificate for the actual use. When installing bonding components that will pass through an enclosure wall, they must have a minimum of IP54 rating equal to the enclosure. All electrical clearances must be maintained per the manufacturer's instructions of the bonding component or per EN 60079-15:2005.
- 6. Ethernet Switch requires protection against transients. The end-product shall provide a suitable form of protection that removes the risk of or limits transients to no more than 42V.

(Revised 8/5/2009) Page 8 of 133

DIN RAIL MOUNTING FOR 708TX AND 708FX2 SERIES

Install the unit on a standard 35mm Din-Rail. Recess the 708TX unit to allow at least 3" of horizontal clearance for copper cable bend radius. Recess the 708FX2 unit to allow at least 5" of horizontal clearance for fiber cable bend radius.

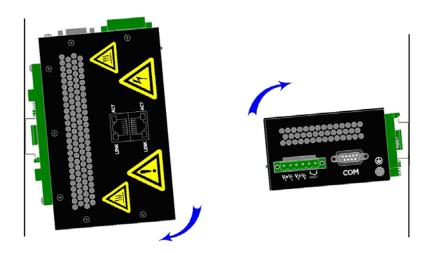

Vertical Mounting

To mount the unit vertically to the 35mm DIN-Rail, place the top edge of the bracket on the back of the unit against the DIN-Rail's top edge at an upward angle. Then, rotate the unit downward and back against the DIN-Rail until it snaps into place.

To remove the vertically mounted unit from 35mm DIN-Rail, carefully apply downward pressure on the unit. Then, rotate the unit upward and away from the 35mm DIN-Rail and lift up for removal.

Horizontal Mounting


To mount the unit horizontally to the 35mm DIN-Rail, place the bottom edge of the bracket on the back of the unit against the DIN-Rail's bottom edge at a downward angle. Then, rotate the unit upward and back against the DIN-Rail until it snaps into place.

To remove the horizontally mounted unit from 35mm DIN-Rail, carefully apply upward pressure on the unit. Then, rotate the unit downward and away from the 35mm DIN-Rail and lower it for removal.

(Revised 8/5/2009) Page 9 of 133

DIN RAIL MOUNTING FOR 716TX AND 716FX2 SERIES


Install the unit on a standard 35mm Din-Rail. Recess the 716TX unit to allow at least 3" of horizontal clearance for copper cable bend radius. Recess the 716FX2 unit to allow at least 5" of horizontal clearance for fiber cable bend radius. There should be at least 4" of clearance on both the top and bottom of the unit to allow proper ventilation.

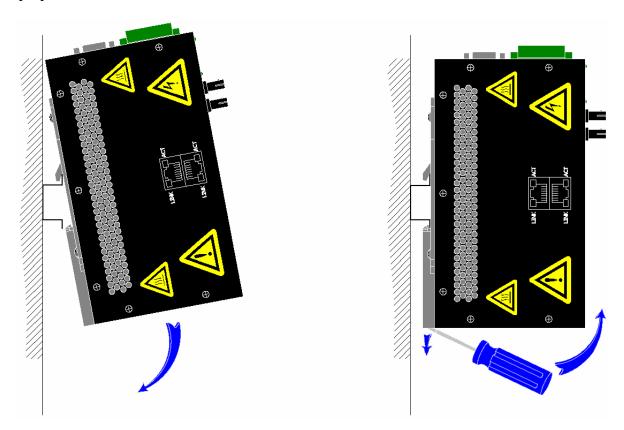

To mount the unit to the 35mm din-rail, place top edge of the bracket on the back of the unit against the din-rail at an upward angle. Lower the bottom of the unit until it snaps into place.

Note: When mounting the switch in the vertical position, you must orientate the power connector to the top as shown above for proper ventilation.

OPTIONAL MOUNTING:

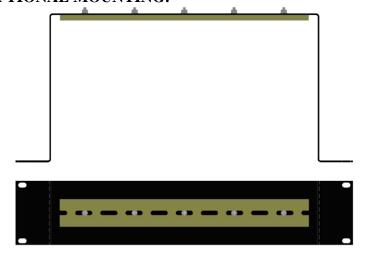


Most N-TronTM products are designed to be mounted on industry standard 35mm DIN-Rail. However, DIN-Rail mounting may not be suitable for all applications.

Our Universal Rack Mount Kit (P/N: URMK) may be used to mount the 700 Series to standard 19" racks as an option.

Our Panel Mount Assembly (P/N: 700-PM) may be used to securely mount the 700 Series to flat surfaces or panels as an option.

(Revised 8/5/2009) Page 10 of 133

FRONT PANEL

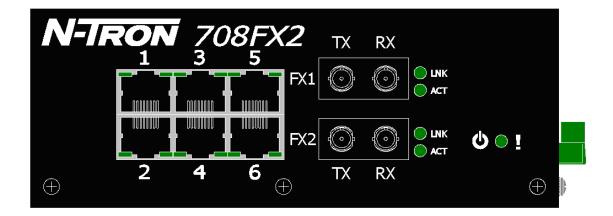

From Top to Left:

RJ45 Ports Auto Sensing 10/100 Base-TX Connections

Fiber Ports 100 Base-FX Connections (only on 708FX2 model)

LED lights when Power is supplied to the unit


NOTE: The RJ45 data port has two LEDs located on each connector. The left LED indicates LINK status, and the right LED indicates ACTIVITY.

LEDs: The table below describes the operating modes:

LED	Color	Description	
	GREEN	Power is ON	
Ф	RED	Power is ON and a fault condition exists	
	OFF	Power is OFF	
LNK	GREEN	10/100Mb Link between ports	
	OFF	No Link between ports	
ACT	GREEN	Data is active between ports	
	OFF	Data is inactive between ports	

(Revised 8/5/2009) Page 11 of 133

APPLYING POWER (Side View)

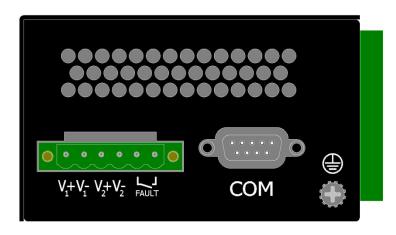

- Unscrew & Remove the DC Voltage Input Plug from the Power Input Header
- Install the DC Power Cables into the Plug (observing polarity).
- Plug the Voltage Input Plug back into the Power Input Header.
- Tightening torque for the terminal block power plug is **0.5** Nm/**0.368** Pound Foot.
- Verify the Power LED stays ON (GREEN).

Notes:

- Only 1 power supply must be connected to power for minimal operation. For redundant power operation, V₁ and V₂ inputs must be connected to separate DC Voltage sources. This device will draw current from both sources simultaneously. Use 16-28 gauge wire when connecting to the power supply.
- The Fault pins on the power connector can be used for an alarm contact. The current carrying capacity is 1A at 24VDC. It is normally open and the relay closes when a fault condition occurs. These pins can be used to connect an external warning device such as a light in order to provide an external alarm. The conditions for generating a fault condition (closing the relay) can be configured through software.

Recommended 24V DC Power Supplies, similar to: N-Tron's P/N NTPS-24-1.3:

- Input AC 115/230V
- Output DC 24-28V
- Output Current 1.3A @ 24V

1.0A @ 28V

- Power 72W
- 35 mm DIN-Rail Mountable
- Dimensions: 45X75X91 mm

(NOTE: Not appropriate for use with M12, POE, and HV models.)

(Revised 8/5/2009) Page 12 of 133


Connecting the Unit

For FX/FXE units, remove the dust cap from the fiber optic connectors and connect the fiber optic cables. The TX port on the FX/FXE models should be connected to the RX port of the far end station. The RX port on the FX/FXE versions should be connected to the TX port of the far end station.

For 10/100 Base-TX ports, plug a Category 5E twisted pair cable into the RJ45 connector. Connect the other end to the far end station. Verify that the LNK LEDs are ON once the connection has been completed. To connect any port to another device (end node, Switch or Repeater), use a standard Category 5E straight

through or crossover cable with a minimum length of one meter and a maximum length of 100 meters.

N-Tron recommends the use of premanufactured Cat5E cables to ensure the best performance. If this is not an option and users must terminate their own ends on the Cat5E cables; one of the two color coded standards shown to the right should be utilized. If a user does not follow one of these two color code standards then the performance and maximum cable distance will be reduced significantly, and may prevent the switch from establishing a link.

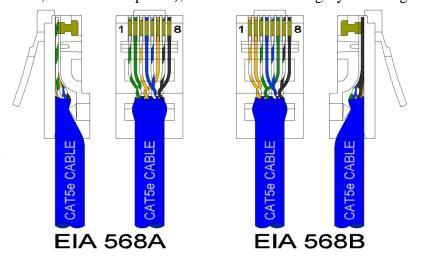


Warning: Creating a port to port connection on the same switch (i.e. loop) is an illegal operation and will create a broadcast storm which will crash the network!

(Revised 8/5/2009) Page 13 of 133

N-TRON SWITCH GROUNDING TECHNIQUES


The grounding philosophy of any control system is an integral part of the design. N-Tron switches are designed to be grounded, but the user has been given the flexibility to float the switch when required. The best noise immunity and emissions (i.e. CE) are obtained when the N-Tron switch chassis is connected to earth ground via a drain wire. Some N-Tron switches have metal din-rail brackets that can ground the switch if the din-rail is grounded. In some cases, N-Tron switches with metal brackets can be supplied with optional plastic brackets if isolation is required.

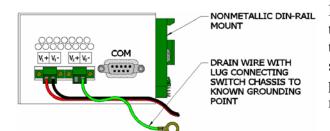

Both V- legs of the power input connector are connected to chassis internally on the PCB. Connecting a drain wire to earth ground from one of the V- terminal plugs as shown here will ground the switch and the chassis. The power leads from the power source should be limited to 3 meters or less in length.

As an alternate, users can run a drain wire & lug from any of the Din-Rail screws or empty PEM nuts on the enclosure. When using an unused PEM nut to connect a ground lug via a machine screw, care should be taken to limit the penetration of the outer skin by less than 1/4 in. Failure to do so may cause irreversible damage to the internal components of the switch.

Note: Before applying power to the grounded switch, you must use a volt meter to verify there is no voltage difference between the power supply's negative output terminal and the switch chassis grounding point.

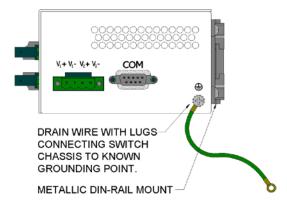

If the use of shielded cables is required, it is generally recommended to only connect the shield at one end to prevent ground loops and interfere with low level signals (i.e. thermocouples, RTD, etc.). Cat5e cables manufactured to EIA-568A or 568B specifications are required for use with N-Tron Switches.




In the event all Cat5e patch cable distances are small (i.e. All Ethernet devices are located in the same local cabinet and/or referenced to the same earth ground), it is permissible to use fully shielded cables terminated to chassis ground at both ends in systems void of low level analog signals.

(Revised 8/5/2009) Page 14 of 133

RJ45 CONNECTOR CRIMP SPECIFICATIONS


Please reference the illustration below for your Cat5 cable specifications:

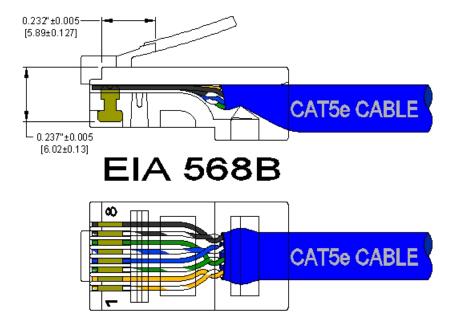

(Revised 8/5/2009) Page 15 of 133

SERIAL INTERFACE

The 700 Series switches provide an EIA-232 interface accessed via a 9-pin female connector (labeled 'COM' on the unit). This is used to access the Command Line Interpreter (CLI). The pin-outs are shown below:

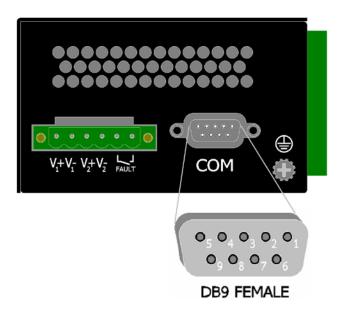

Serial Cable

Connect the serial COM port of your PC and the 700 Series Switch using a standard straight through serial cable. You will require a cable with a 9-pin or 25-pin sub-D female connector for the PC end, and a 9-pin male sub-D connector for the 708 Series end.

The following table shows the pin-out and the connections for both types of cable:

PC Port	25-Pin	9-Pin	700 Series	
	Female	Female	9-Pin Male	
Signal Name	Pin#	Pin#	Pin#	Signal Name
TXD	2	3	3	RXD
RXD	3	2	2	TXD
GND	7	5	5	GND

Standard straight through serial cables are readily available from Radio Shack or a variety of computer stores.

HyperTerminal

The following configuration should be used in HyperTerminal:

Port Settings: 115200

Data Bits: 8

Parity: **NONE**

Stop bits: 1

Flow Control: **NONE**

(Revised 8/5/2009) Page 16 of 133

Overview of Advanced Features

Mode of Operation

Each port on the switch can be configured into different modes of operation as shown below:

Copper Ports: 100Base Fiber Ports: - Full Duplex

- Half Duplex
- Full Duplex
- Auto Negotiation

Half Duplex

In half duplex mode, the CSMA/CD media access method is the means by which two or more stations share a common transmission medium. To transmit, a station waits (defers) for a quiet period on the medium (that is, no other station is transmitting) and then sends the intended message in bit-serial form. If, after initiating a transmission, the message collides with that of another station, then each transmitting station intentionally transmits for an additional predefined period to ensure propagation of the collision throughout the system. The station remains silent for a random amount of time (back-off) before attempting to transmit again.

Full Duplex

Full duplex operation allows simultaneous communication between a pair of stations using point-to-point media (dedicated channel). Full duplex operation does not require that transmitters defer, nor do they monitor or react to receive activity, as there is no contention for a shared medium in this mode.

Auto Negotiation

In Auto Negotiation mode, the port / hardware detects the mode of operation of the station that is connected to this port and sets its mode to match the mode of the station.

Port Mirroring

A Mirroring Port is a dedicated port that is configured to receive the copies of Ethernet frames that are being transmitted out and also being received in from any other port that is being monitored.

Port Trunking

Port Trunking is the ability to group two network ports to increase the bandwidth between two machines (switch or any work station). This feature allows grouping of high-speed connectivity and provides redundant connection between switches, so that a trunk can act as a single link between the switches.

Priority Tagging (QoS)

IEEE 802.1p priority tagging is supported for two classes of services along with bandwidth support per priority level. Transparent mode is supported through configuration wherein if the field is set, the tag bits are ignored. The user can configure up to 8 different priority levels per port. Also priority overriding (overriding the tagged field) can be enabled or disabled by the user.

Page 17 of 133 (Revised 8/5/2009)

Virtual LAN

The switch provides support for setting up tagged Virtual LANs. A port may belong to any number of Virtual LANs. The VLAN membership of a station is determined by the VLAN(s) that have been defined for the port to which the station is connected. If a station should move from one port to another, it loses its current VLAN membership and inherits that of the new port it is connected to.

A Default Virtual LAN exists to which a port, which is not a member of any other Virtual LAN, will belong. This allows the switch to operate as a 'normal' Bridge when it is used in a network. A port is automatically removed from the Default VLAN when it is reconfigured to belong to another Virtual LAN.

Using Tagged VLANs, the switch has the ability to take non-tagged packets in some ports, add a VLAN tag to the packet and send it out tagged ports on the switch. The VLANs can also be configured to accept tagged packets in tagged ports, strip the tags off the packets, and send the packets back out other untagged ports. This allows a network administrator to set up the switch so he can support devices on the network that do not support VLAN Tagged packets. The administrator can also set up the ports to discard any packets that are tagged or to discard any packets that are untagged based on a hybrid VLAN of both tagged and untagged ports, and using the VLAN Ingress Filter on the switch.

The 700 Series switch also has the ability to allow overlapping VLANs. Overlapping VLANs give the user the ability to have one or more ports share two or more VLAN groups. For more information and examples on how this could be implemented, please see our website's technical documents.

Rapid Spanning Tree Protocol

The Rapid Spanning Tree Protocol as specified in IEEE 802.1D-2004 is supported. One Spanning Tree per non-overlapping VLAN is supported. The Rapid Spanning Tree Protocol (RSTP) supersedes the Spanning Tree Protocol (STP) which was described in IEEE 802.1D-1998. The RSTP is used to configure a simply connected active network topology from the arbitrarily connected bridges of a bridged network. Bridges effectively connect just the LANs to which their forwarding ports are attached. Ports that are in a blocking state do not forward frames. The bridges in the network exchange sufficient information to automatically derive a spanning tree.

RSTP allows for much quicker learning of network topology changes than the older STP. RSTP supports new and improved features such as rapid transition to forwarding state. RSTP also sends out new BPDUs every hello time instead of just relaying them. RSTP interoperates with older STP switches by falling back to the older STP when the older BPDUs are detected on bridge ports. The user can also manually configure bridge ports to use the older STP when desired.

SNMP Traps

The 700 Series switch supports up to 5 SNMP Trap Stations to which SNMP Traps will be sent. The switch supports four standard traps; Link Up, Link Down, Cold Start and Warm Start. SNMP Traps will be sent to all the stations configured on the switch if a port Link goes up or down, when the switch first powers up and when the switch is reset.

IGMP Snooping

IGMP Snooping is enabled by default, and the switch is *Plug and Play* for IGMP. IGMP snooping provides intelligent network support for multicast applications. In particular, unneeded traffic is reduced. IGMP

(Revised 8/5/2009) Page 18 of 133

Snooping is configured via the web console and if enabled, operates dynamically upon each power up. Also, there can be manual only or manual and dynamic operation. Note that "static multicast group address" can be used whether IGMP Snooping is enabled or not.

IGMP Snooping will function dynamically without user intervention. If some of the devices in the LAN do not understand IGMP, then manual settings are provided to accommodate them. The Internet Group Management Protocol (IGMP) is a protocol that provides a way for a computer to report its multicast group membership to adjacent 'routers'. In this case N-Tron 700 Series switches provide *router-like functionality*. Multicasting allows one computer to send content to multiple other computers that have identified themselves as interested in receiving the originating computer's content. Multicasting can be used to transmit only to an audience that has joined (and not left) a multicast group membership. IGMP version 2 is formally described in the Internet Engineering Task Force (IETF) Request for Comments (RFC) 2236. IGMP version 1 is formally described in the Internet Engineering Task Force (IETF) Request for Comments (RFC) 1112. The 700 Series supports v1 and v2.

N-Ring

N-Ring is enabled by default, and the switch is *Plug and Play* for N-Ring except that initially one must enable an N-Ring enabled device to be the N-Ring Manager for a given N-Ring. Subsequently, N-Ring operates dynamically upon each power up. Using N-Tron's proprietary N-Ring technology offers expanded ring size capacity, detailed fault diagnostics, and a standard healing time of 30ms. The N-Ring Manager periodically checks the health of the N-Ring via health check packets. If the N-Ring Manager stops receiving the health check packets, it times out and converts the N-Ring to a backbone within 30ms. When using all N-Ring enabled switches in the ring, a detailed ring map and fault location chart is also provided on the N-Ring Manager's web browser. N-Ring status is also sent from the N-Ring Manager to the N-View OPC Server to identify the health status of the ring. Up to 250 N-Ring enabled switches can participate in one N-Ring topology. Switches that do not have N-Ring capability may be used in an N-Ring, however the ring map and fault location chart cannot be as detailed at these locations.

N-Link

The purpose of N-Link is to provide a way to redundantly couple an N-Ring topology to one or more other topologies, usually other N-Ring topologies. Each N-Link configuration requires 4 switches: N-Link Master, N-Link Slave, N-Link Primary Coupler, and N-Link Standby Coupler. N-Link will monitor the link status of the Primary and Standby Coupler links. While the Primary Coupler link is healthy, it will forward network traffic and the Standby Coupler link will block network traffic. When a problem is detected on the Primary Coupler link, the Primary Coupler link will block network traffic and the Standby Coupler link will forward network traffic. While the N-Link Master and Slave are in communication via the Control link, only one Coupler link (Primary or Standby) will forward network traffic while the other Coupler link will block network traffic.

(Revised 8/5/2009) Page 19 of 133

DHCP

For a DHCP overview, reference: http://www.n-tron.com/pdf/DHCP White Paper.pdf

For detailed Engineering Instructions on DHCP, reference: http://www.n-tron.com/pdf/DHCP Technical Instructions.pdf

DHCP Client

The switch will automatically obtain an IP assignment from a DHCP Server. Communication between the client and server can optionally go through a DHCP Relay Agent.

DHCP Relay Agent

DHCP Relay Agent (Option 82) allows communication between the client and server to cross subnet and VLAN boundaries. It also allows for a device on a specific port to receive a specific IP address and if the device is replaced, the replacement receives the same IP address as the original device.

DHCP Server

DHCP Server allows DHCP Client devices to automatically obtain an IP assignment. IP assignments can be set up as a dynamic range of IP addresses available to any client device; or specific IP addresses based on the clients MAC address, Client ID (Option 61), or Relay Agent connection (Option 82).

(Revised 8/5/2009) Page 20 of 133

TROUBLESHOOTING

- 1. Make sure the **(Power LED)** is ON.
- 2. Make sure you are supplying sufficient current for the version chosen. Note: The Inrush current will exceed the steady state current by $\sim 2X$.
- 3. Verify that Link LEDs are ON for connected ports.
- 4. Verify cabling used between stations.
- 5. Verify that cabling is Category 5E or greater for 100Mbit operation.

SUPPORT

Contact N-Tron Corp. at: TEL: 251-342-2164 FAX: 251-342-6353

E-MAIL: N-TRON_Support@n-tron.com

WEB: www.n-tron.com

FCC STATEMENT

This product complies with Part 15 of the FCC-A Rules.

Operation is subject to the following conditions:

- (1) This device may not cause harmful Interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this device in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

INDUSTRY CANADA

This Class A digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations. Operation is subject to the following two conditions; (1) this device digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations. Operation is subject to the following two conditions; (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareillage numérique de la classe A répond à toutes les exigences de l'interférence canadienne causant des règlements d'équipement. L'opération est sujette aux deux conditions suivantes: (1) ce dispositif peut ne pas causer l'interférence nocive, et (2) ce dispositif doit accepter n'importe quelle interférence reçue, y compris l'interférence qui peut causer l'opération peu désirée.

(Revised 8/5/2009) Page 21 of 133

Web Software Configuration


Web Management

Enter the switch's IP address in any web browser and login to the web management feature of the 700 Series.



Default:


User Name: *admin* Password: *admin*

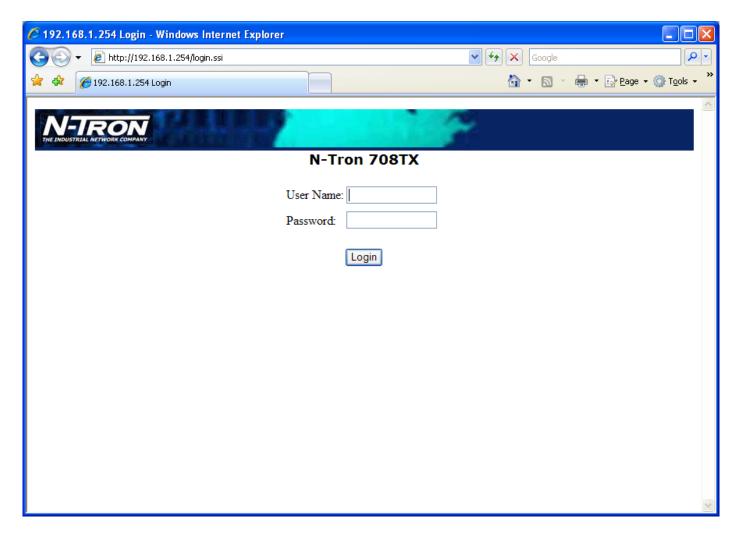

(Revised 8/5/2009) Page 22 of 133

Web Management - Home


When the administrator first logs onto a 700 Series switch the default home page will be displayed. On the left hand side of the screen there is a list of configurable settings that the 700 Series switch will support. This section of the manual will go through each and every choice listed on the left hand side of the screen and explain how to configure those settings. In the center of the main home page the administrator can see some basic information like what firmware revision the switch is running. The firmware can be upgraded at a later time in the field using TFTP.

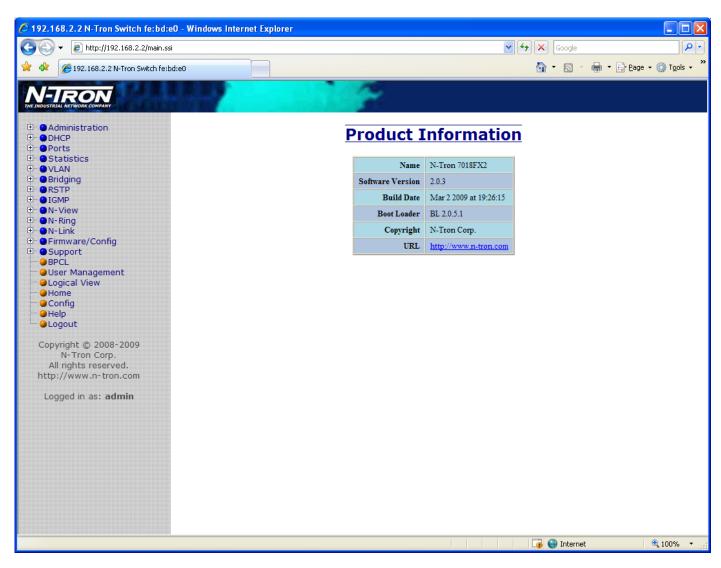

(Revised 8/5/2009) Page 23 of 133

Web Management - Menu Structure

To the left, there is a menu which is shown fully opened below. The pages opened by each of the individual selections are described in the rest of this section. The use of each of these pages is also described in this section. In most of the descriptions, only the right side of the page is shown.

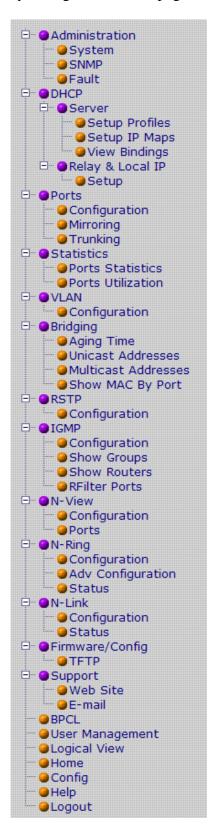

(Revised 8/5/2009) Page 24 of 133

Administration – System

The System tab under the Administration category lists the following information about the switch:

IP Address

Contains the configured IP Address of the device.

Subnet Mask

Contains the configured Subnet Mask of the device.

Gateway

Contains the configured Default Gateway of the device.

MAC Address

MAC Address of the device.

System Up Time

This parameter represents the total time count. This time has elapsed since the switch was turned ON or RESET.

Name


It shows the name of the product, which allows alphanumeric and special characters (#, _, -) only.

Contact

The person to contact for system issues, which should be someone within your organization.

Location

The physical location of the switch.

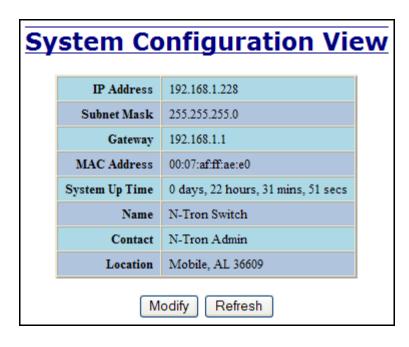

(Revised 8/5/2009) Page 25 of 133

Administration - System, Continued...

By selecting the Modify button, you will be able to change the switch's IP Address, Subnet Mask, Gateway, Name, Contact information, and the Location of the switch through the web management features. It is recommended to change the TCP/IP information through the Command Line Interface (CLI) initially, but it defaults to the following:


IP Address – 192.168.1.201 Subnet Mask – 255.255.255.0 Gateway – 192.168.1.1

S	System Configuration			
	IP Address	192.168.1.228		
	Subnet Mask	255.255.255.0		
	Gateway	192.168.1.1		
	Name	N-Tron Switch		
	Contact N-Tron Admin			
	Location	Mobile, AL 36609		
	Update Cancel			

(Revised 8/5/2009) Page 26 of 133

Administration – SNMP


The SNMP tab under the Administration category shows a list of IP Addresses that act as SNMP Traps. The Read-Only, Read-Write, and Trap Community Names are also shown here.

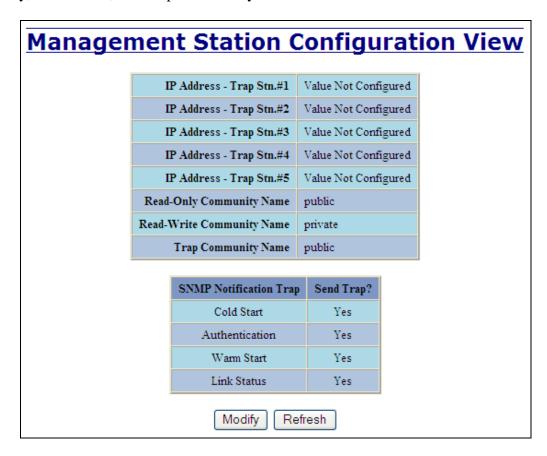

By selecting the Modify button, you will be able to change any of the fields listed. This allows the user to set an IP address for a Trap station or change the Community Names. If the SNMP Notification Trap is enabled, systems that are listed as a Trap station will be sent the corresponding notification trap. To restore a Trap to "Value Not Configured", enter '0.0.0.0'.

(Revised 8/5/2009) Page 27 of 133


Administration - SNMP, Continued...

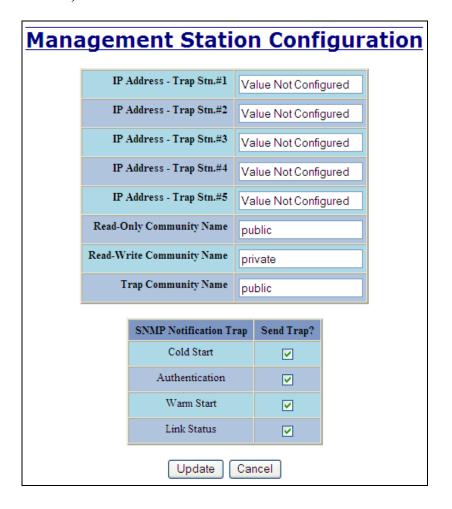


(Revised 8/5/2009) Page 28 of 133

Administration – Fault

The Fault tab under the Administration category provides configurable selections indicating the way to notify when a Power or N-Ring Signal fault occurs. Power signal faults consist of V_1 and V_2 . The notification may consist of any combination of the options: Show web, Show LED, and Contact. N-Ring signal faults consist of: Broken, Partial Break (Low), Partial Break (High), and Multiple Managers.

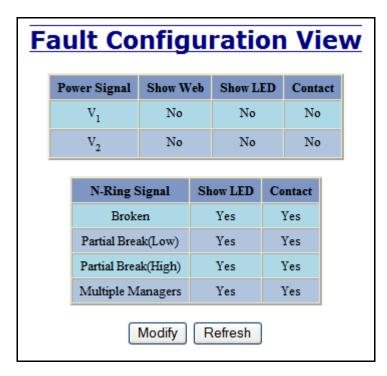

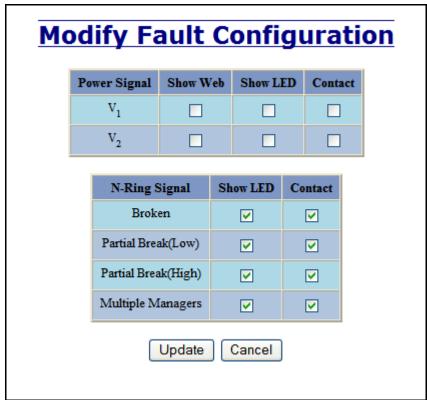

(Revised 8/5/2009) Page 29 of 133

DHCP – Server – Setup Profiles

The Setup Profiles tab under the DHCP/Server category lists the following information about the current state of the server and the existing network profiles:

Server Enabled

Indicates whether the DHCP server is active.

Allow Broadcast

Indicates whether the DHCP server will process broadcast messages.

Delay Broadcast (Ms)

The amount of time the DHCP server will delay processing a broadcast message.

Server ID

Descriptive name of the DHCP server.

Profile Name

Descriptive name of the network profile.

Address Pool

Range of IP addresses which the profile can use.

Subnet Address

The most restrictive subnet address calculated from the address pool range.

Subnet Mask

The most restrictive subnet mask calculated from the address pool range.

Domain Name


The domain name to be presented to the client.

Has Profile IP Maps

Indicates whether the profile has IP maps associated with it.


Delete

Deletes the profile along with all IP maps and bindings associated with it. The Default profile cannot be deleted.

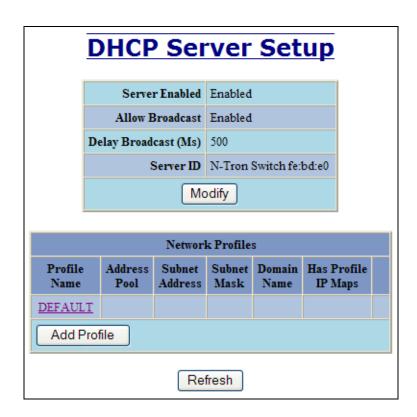

(Revised 8/5/2009) Page 30 of 133

DHCP – Server – Setup Profiles, Continued...

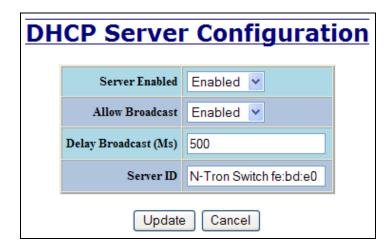


DHCP Server Network Profile			
	Network Profile Name		
	Address Pool Start		
	Address Pool End		
	Lease Time	Days Hours	
	Adva	nced <<	
	Broadcast Address *		
	Domain Name *		
	DNS Server 1 **		
	DNS Server 2 **		
	Gateway 1 **		
	Gateway 2 **		
* When field is left blank, the corresponding default profile value is used. ** When both related fields are left blank, the corresponding default profile values are used.			
Update Cancel			

(Revised 8/5/2009) Page 31 of 133

DHCP – Server – Setup IP Maps

The Setup IP Maps tab provides the way to create IP mappings with an existing network profile. There are three types of mappings that can be created: Dynamic Range, Static Range, and Single IP.

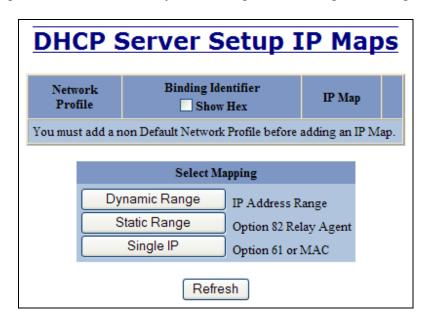

The Dynamic Range type of mapping is used to create a range of dynamic IP addresses for requesting clients. The following information is required:

Network Profile


An existing network profile to which the IP map applies.

Low IP

The starting IP address of a range.

High IP

The ending IP address of a range.

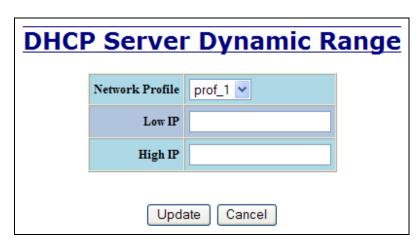

(Revised 8/5/2009) Page 32 of 133

DHCP - Server - Setup IP Maps, Continued...

The Static Range type of mapping is used to create a range of static IP addresses dedicated to specific ports on a relay agent switch. There are two different data entry formats available according to whether the relay agent type is for an N-TRON or for a generic switch.

To create a range of static IP addresses on an N-Tron relay agent switch:

Network Profile

An existing network profile to which the IP map applies.

Relay Agent Type

Should be set to N-TRON.

Switch Model

List of N-TRON models that support this feature.

Remote ID

A unique identifier that designates the N-TRON relay agent switch.

Add

Checkbox used to add an IP map for the corresponding port.

Port No

The actual port number.

Port Name

Descriptive name of the port.

VLAN

VLAN ID that the port is a member of.

Circuit II


Auto-generated string based on the port name and VLAN ID.

IP Address

IP address to assign to the IP map.

(Revised 8/5/2009) Page 33 of 133

DHCP - Server - Setup IP Maps, Continued...

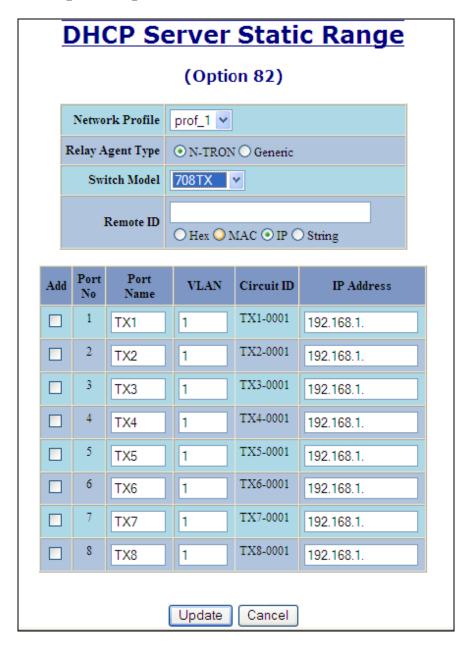

(Revised 8/5/2009) Page 34 of 133

DHCP - Server - Setup IP Maps, Continued...

To create a range of static IP addresses on a generic relay agent switch:

Network Profile

An existing network profile to which the IP map applies.

Relay Agent Type

Should be set to Generic.

Port Count

The number of ports on the particular relay agent switch.

Add

Checkbox used to add an IP map for the corresponding port.

Port No

The actual port number.

Remote ID

The identifier that corresponds to an Option 82 Remote ID sub-option used by the particular relay agent switch.

Circuit ID

The identifier that corresponds to an Option 82 Circuit ID sub-option used by the particular relay agent switch.

IP Address

IP address to assign to the IP map.

	DHCP Server Static Range			
	(Option 82)			
		Network Profile	prof_1 🕶	
		Relay Agent Type	○ N-TRON ⊙ Generic	
		Port Count	8 Apply	
	Port			
Add	No	Remote ID	Circuit ID	IP Address
	1			192.168.2.
		• Hex O MAC O IP O String	• Hex • MAC • IP • String	
	2			192.168.2.
		• Hex O MAC O IP O String	• Hex • MAC • IP • String	
	3			192.168.2.
		• Hex O MAC O IP O String	● Hex ○ MAC ○ IP ○ String	
	4			192.168.2.
		• Hex O MAC O IP O String	• Hex • MAC • IP • String	
	5			192.168.2.
		• Hex OMAC OIP OString	• Hex • MAC • IP • String	
	6	0	0	192.168.2.
	-	• Hex O MAC O IP O String	• Hex • MAC • IP • String	
	7		OH, OMAGOROGO	192.168.2.
	0	• Hex • MAC • IP • String	● Hex ○ MAC ○ IP ○ String	
	8	OHOMACOIDOS:	OTH-OMACOIDOS:	192.168.2.
		• Hex • MAC • IP • String	● Hex ○ MAC ○ IP ○ String	
	Update Cancel			

(Revised 8/5/2009) Page 35 of 133

DHCP - Server - Setup IP Maps, Continued...

The Single IP type of mapping is used to create a static IP address for an individual client. The following information is required:

Network Profile

An existing network profile to which the IP map applies.

IP


The static IP address to offer to a client.

Unique ID

The unique identifier that must match either the client identifier (Option 61) or the client's hardware address (MAC).

Format

Designates how the Unique ID is interpreted.

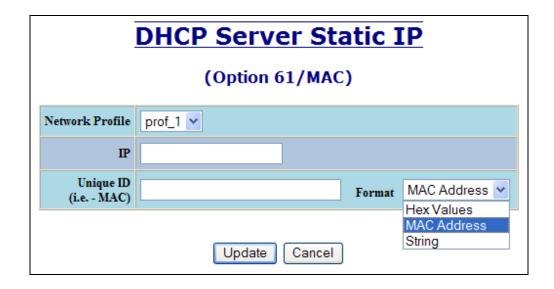

(Revised 8/5/2009) Page 36 of 133

DHCP – Server – View Bindings

The View Bindings tab lists the bindings of physical devices to IP addresses that are in use or offered:

Network Profile

The profile applied to the binding entry.

Binding Identifier

The client associated with the binding entry.

Client Hardware Address (MAC)

The client's MAC address.

Client IP Address

The actual IP address assigned to the binding entry.

Status

Indicates the current status of the binding entry.

Release

Removes the corresponding binding.


WARNING: By releasing an IP address, it is possible to end up with two physical devices with the same IP address which may cause network disruption to that IP address.

DHCP Server Binding List							
Network Profile	Binding Identifier Show Hex	Client Hardware Address (MAC)	Client IP Address	Status			
prof_1	Client ID (String) = N-Tron Switch fb:fa:40	00:07:af:fb:fa:40	192.168.2.100	Dynamic, In Use	Release		
		Refresh					

(Revised 8/5/2009) Page 37 of 133

DHCP - Relay & Local IP - Setup

The Setup tab under the DHCP/Relay & Local IP category shows the current state of the relay agent.

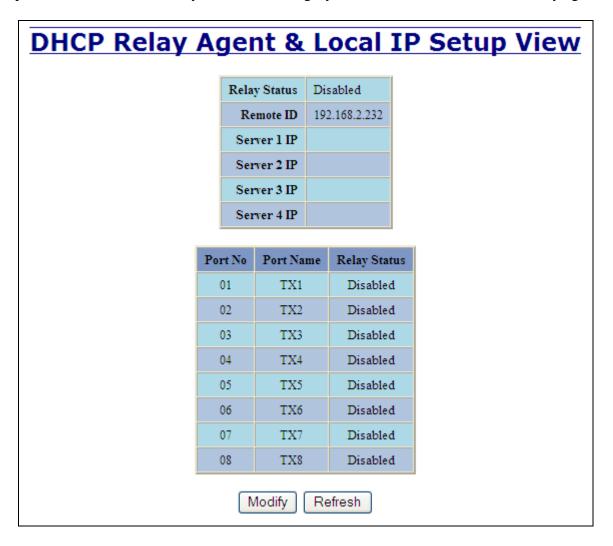

By selecting the Modify button, you can configure general settings of the relay agent, as well as, configure settings on a per port basis. The following describes these settings:

Relay Status

Indicates whether the DHCP relay agent is active.

Remote ID

The unique identifier that designates the relay agent switch.

Server # IP

The configured IP address of the DHCP servers.

Port No

The actual port number.

Port Name

The descriptive name of the port.

Relay Status

The selection to designate whether the port will perform relay agent functionality. The choices are:

Disabled The port will function without relay agent processing.

Enabled The port will relay DHCP client-originated broadcast packets to the DHCP servers.

Assign Local IP The port will not relay DHCP client-originated broadcast packets. Instead the relay agent


will offer the port's locally assigned IP address to the client.

(Revised 8/5/2009) Page 38 of 133

DHCP - Relay & Local IP - Setup, Continued...

Other Data

When the Relay Status is set to Enabled, the Circuit ID for the port can be specified. When the Relay Status is set to Assign Local IP, the IP address for the port can be specified.

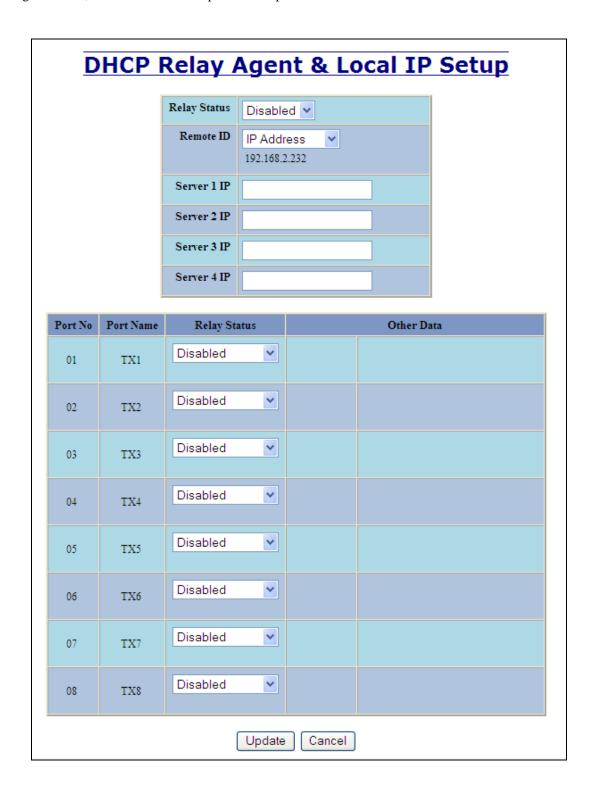

(Revised 8/5/2009) Page 39 of 133

Ports – Configuration

The Configuration tab under the Ports category will show a detailed overview of all the active ports on the switch. The overview will display the following information:

Port Number

This is the port index.

Port Name

This field displays the name of the port. The designation of TX is for copper ports and FX is for fiber optic ports.

Admin Status

This configurable field displays the existing status of the port whether it is **Enabled/Disabled**.

Link Status

Current Link state of the port.

Auto Negotiation State

This configurable field displays the current auto-negotiation state whether it is Enabled/Disable.

Port Speed

This configurable field displays the speed of each port 10/100 Mbps.

Duplex Mode

This configurable field displays the existing mode of the port whether it is Full Duplex/Half Duplex.

Flow Control State

This configurable field displays the existing flow control status of each port. When enabled, the individual port supports half-duplex back pressure and full-duplex flow control. The default is **Disabled.**

Force High Priority State

This configurable field displays the port priority status of each port. When enabled for a port all frames received on that port will be forced to the highest priority queue regardless of 'Default Priority' setting or priority tags within the received frames. The default is **Disabled**. In an untagged N-Ring configuration, the N-Ring ports on the N-Ring Manager and active N-Ring Members will be **Enabled**.

Default Priority

This configurable field displays the default QoS priority for the port when an untagged frame is received. The range is **0-7.**

RSTP State

The current RSTP status of a port. It may contain **Disable/Discarding/Learning/Forwarding**.

PVID

This configurable field displays the existing port VLAN ID setting. The allowable range is 1-4094.


	Port Configuration View										
Port No	Port Name	Admin Status	Link Status	Auto Nego	Port Speed	Duplex Mode	Flow Control	Force High Priority	Default Priority	RSTP State	PVID
<u>01</u>	TX1	Enabled	Up	Enabled	100	Full	Disabled	Enabled	1	Forwarding	1
02	TX2	Enabled	Up	Enabled	100	Full	Disabled	Enabled	1	Forwarding	1
<u>03</u>	TX3	Enabled	Up	Enabled	100	Full	Disabled	Disabled	1	Forwarding	1
04	TX4	Enabled	Up	Enabled	100	Full	Disabled	Disabled	1	Forwarding	1
<u>05</u>	TX5	Enabled	Up	Enabled	100	Full	Disabled	Disabled	1	Forwarding	1
<u>06</u>	TX6	Enabled	Up	Enabled	100	Full	Disabled	Disabled	1	Forwarding	1
<u>07</u>	TX7	Enabled	Down	Enabled	Auto	Auto	Disabled	Disabled	1	Disabled	1
08	TX8	Enabled	Up	Enabled	100	Full	Disabled	Disabled	1	Forwarding	1
	Refresh										

(Revised 8/5/2009) Page 40 of 133

Ports – Configuration, Continued...

The User can click on the Port Number to configure each port individually. This will allow the user to change the port's settings for the following fields which are explained above:

Admin Status Speed and Duplex Flow Control Force High Priority Default Priority PVID

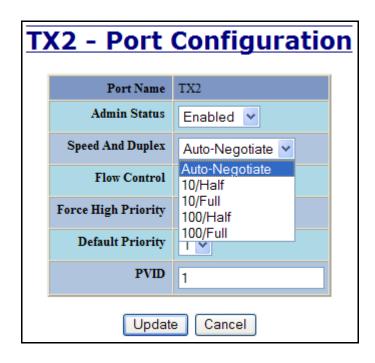


(Revised 8/5/2009) Page 41 of 133

Ports – Mirroring

A mirroring port is a dedicated port that is configured to receive the copies of Ethernet frames that are being transmitted out and also being received in from any other port that is being monitored.


The Mirroring tab under the Ports category displays the status including the list of Source Ports and the Destination Port that the Sources are being mirrored to.

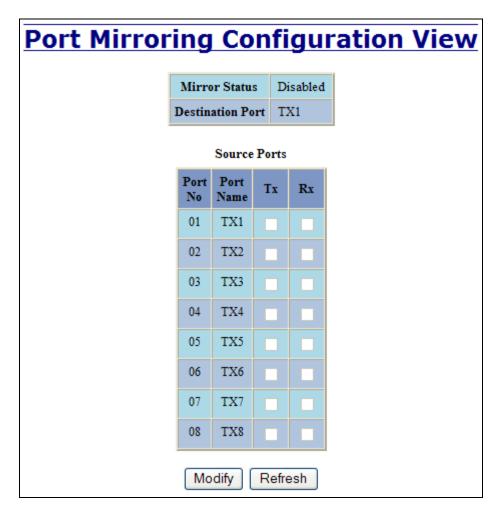

(Revised 8/5/2009) Page 42 of 133

Ports – Mirroring, Continued...

Following the Modify button, you can enable the status of port mirroring and select source ports and the destination port that the source ports will be mirrored to.

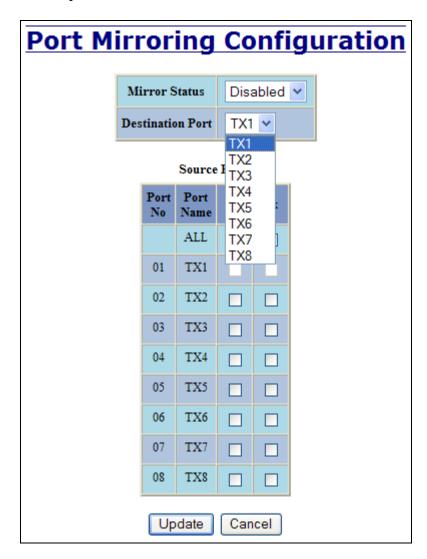

(Revised 8/5/2009) Page 43 of 133

Ports – Trunking


The Trunking tab under the Ports category displays the following details:

Trunk Ports


This field displays the ports associated with the trunk.

Trunk Status

This configurable field displays the existing status of the trunk. It can be either Enabled/Disabled.

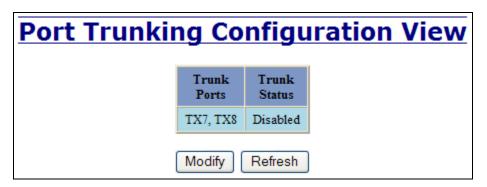

By selecting the Modify button, you can select a trunk group.

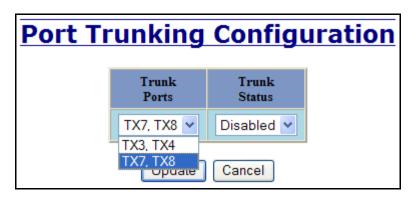

Note: RSTP must be disabled in order to use the Trunking feature. Two ports of the same speed can constitute a valid trunk. Only 1 Trunk per switch can be created.


All trunk ports must be at the same speed and duplex mode. If a port is not linked, there could be difficulty as to similar speed and duplex mode. It is best to hard code speed and duplex mode for each trunking link, at both ends.

Do not use Trunking on an N-Ring manager. Do not connect the N-Ring to actively Trunking ports on an Auto Member.

(Revised 8/5/2009) Page 44 of 133

Statistics – Port Statistics


The Ports Statistics tab under the Statistics category displays a list of MIB parameters. Each port has a separate counter for each parameter. This gives users the ability to see what kind of packets are going over which ports. At the bottom of the page for each port there are two buttons. Refresh will update the statistics for that port number and Clear will reset all the counters for that port number.

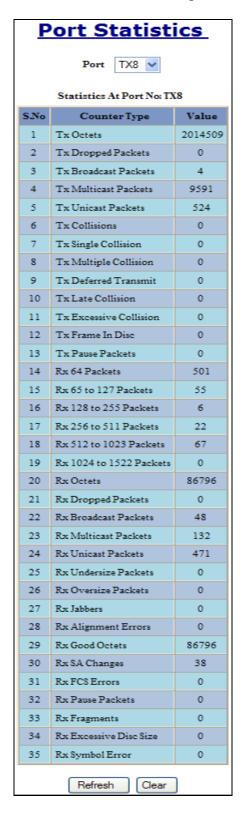

(Revised 8/5/2009) Page 45 of 133

Statistics – Port Utilization

The Ports Utilization tab under the Statistics category shows all the ports on the switch and will display a bar graph showing the percentage of bandwidth being used. These figures and bars are for a general feeling of what the bandwidth usage is. N-Tron recommends the use of N-View in order to get a precise bandwidth usage figure.

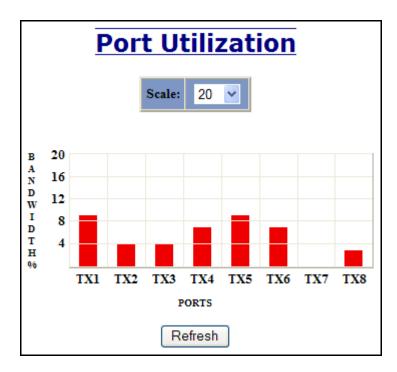

(Revised 8/5/2009) Page 46 of 133

VLAN – Configuration

Replace VID Tag with Default Port VID


Specifies whether or not to replace the incoming VID tag with the port's designated VID.

Perform Ingress Filtering

Specifies whether or not to filter out ingress frames when a VID violation is detected.

Discard Non-Tagged for Ports

Specifies whether or not non-tagged ingress frames are dropped by the selected ports.

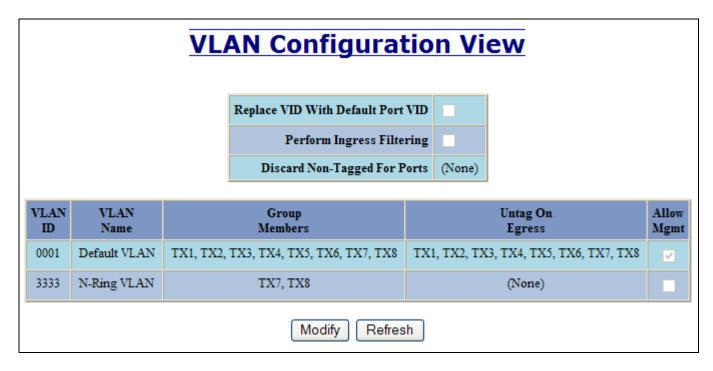

Note that for convenience in most frequent use:

- Ports are deleted from group1 as each port is added to another group.
- Ports are added to group1 if a deletion leaves a port with no group.
- If it is desired to have a port on group1 and also on other group(s) configure group1 last to achieve that.

(Revised 8/5/2009) Page 47 of 133

	VLAN Configuration							
		Replace VID Tag With Default Port VID						
		Perform Ingress Filtering						
		Discard Non-Tagged For Ports	□TX1 □TX2 □TX3 □TX4 □TX5 □TX6 □TX7 □TX8					
		Update	Cancel					
		VLAN G	Froups					
VLAN ID	VLAN Name	Group Members	Untag On Egress	Allow Mgmt	Delete			
0001	Default VLAN	TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8	TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8	V				
3333	N-Ring VLAN	TX7, TX8	(None)		Delete			
Add								
	Done Refresh							

(Revised 8/5/2009) Page 48 of 133

VLAN – Group Configuration

VLAN ID

This field displays the VLAN ID. The range should be 1-4094.

VLAN Name

This configurable field displays the name of the VLAN, which accepts alphanumeric and special characters (#, _, -, .) only.

Allow Management

Specifies whether or not all ports in this VLAN are management ports.

Change PVID of Member Ports

Specifies whether or not the PVID of the member ports is set to this VLAN ID.

Port No

This is the port index.

Port Name

Descriptive name of the port

Group Member

Specifies whether or not the port is included in the group.

Untag on Egress

Specifies whether or not egress frames are tagged by the designated port.

Tagged VLAN Group Configuration							
		ID					
		Name					
	Allow Manag	gement					
	Change P' Member		<u>~</u>				
	Gı	roup Ports					
	Port No	Port Name	Group Member	Untag On Egress			
	01	TX1					
	02	TX2					
	03	TX3					
	04	TX4					
	05	TX5					
	06	TX6					
	07	TX7					
	08	TX8					
	Update Cancel						

(Revised 8/5/2009) Page 49 of 133

Bridging – Aging Time

The Aging Time tab under the Bridging category will display the currently configured Aging Time. This page allows users to modify this variable to meet their needs.



After selecting the Modify button, the user will be presented with a page that allows the number to be entered and updated. The default aging time is 20 seconds.




Note: If the switch is an active participant of an N-Ring, then the N-Ring Aging Time will be used instead of the Bridging Aging Time.


(Revised 8/5/2009) Page 50 of 133

Bridging – Unicast Addresses

The Unicast Addresses tab under the Bridging category will display a list of MAC addresses that are associated with each respective port number. This can be used to statically assign a MAC address access to a single port on the switch.

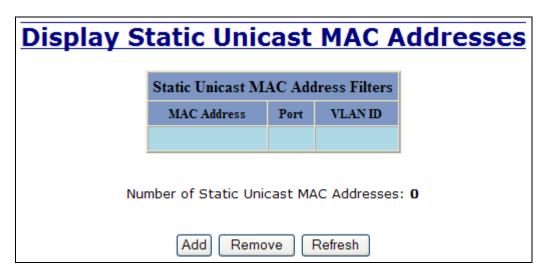


Following the Add button on the page above, the administrator must enter a valid MAC address and associate it with a port number on the switch. Once the administrator hits the Add button, the changes will take effect instantly.

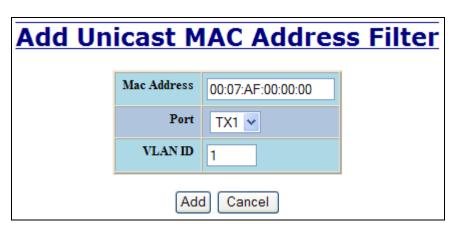

(Revised 8/5/2009) Page 51 of 133

Bridging – Unicast Addresses, Continued...

Once a static MAC address has been added, it will be displayed in a list on the main page under Unicast MACs tab.

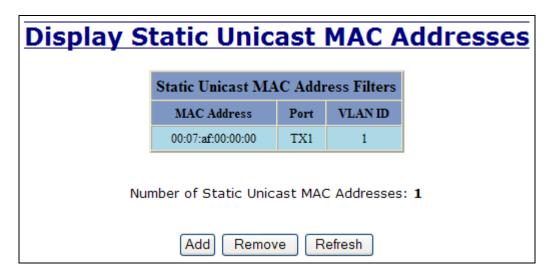


Following the Remove button on the example above, an administrator can select a static MAC address from the list using a pull-down menu. After selecting the MAC address, the administrator needs to press the Remove button on the page to remove the entry

Remove U	Inicast MAC Address Filter
	Mac Address 00:07:af:00:00:00 ▼
Numb	er of Static Unicast MAC Addresses: 1
	Remove


(Revised 8/5/2009) Page 52 of 133

Bridging – Multicast Addresses

The Multicast Addresses tab under the Bridging category will display a list of Multicast Group Addresses that are associated with respective port numbers. This may be used to statically assign a Multicast Group Address access to a group of ports on the switch.

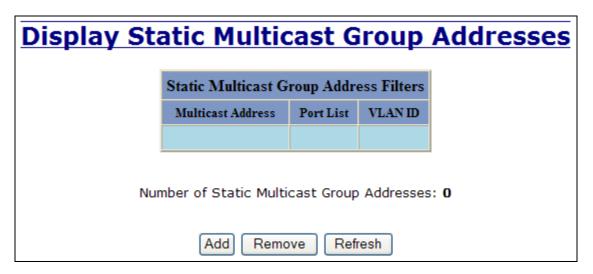

Following the Add button on the page above, the administrator must enter a valid Multicast Group Address and associate it with a port number or list on the switch. Once the administrator clicks on the Add button, the changes will take effect instantly.

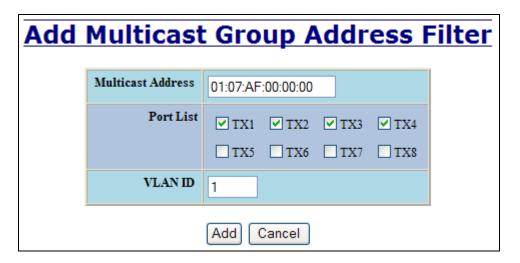


Note: If there are multiple ports on different VLANs, the 708 will apply the static multicast address to the lowest VLAN-ID that is associated with one of the ports assigned to the static multicast address. So if the lowest VLAN-ID contains all the ports assigned to the static multicast address (an umbrella VLAN), it will function for all those ports with no problems. This can be achieved with overlapping VLANs.

(Revised 8/5/2009) Page 53 of 133

Bridging – Multicast Addresses Continued...

After adding a Multicast Group Address, it will appear on the main list and will show the associated ports that go along with that address.

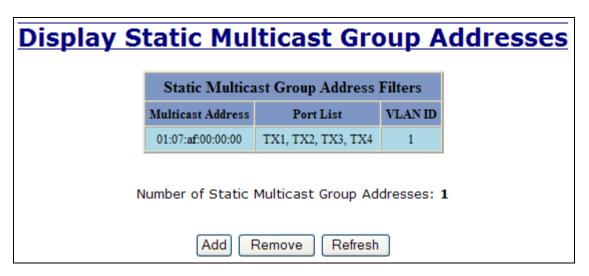

Following the Remove button on the example above, the administrator will be presented with a list of Multicast Group Addresses that are configured on the switch. Using the pull-down menu, the administrator should select the desired address to be removed. Then click on the Remove button at the bottom of the page.




Note: If there are multiple ports on different VLANs, the 708 will apply the static multicast address to the lowest VLAN-ID that is associated with one of the ports assigned to the static multicast address. So if the lowest VLAN-ID contains all the ports assigned to the static multicast address (an umbrella VLAN), it will function for all those ports with no problems. This can be achieved with overlapping VLANs.

(Revised 8/5/2009) Page 54 of 133

Bridging – Show MAC by Port

This feature shows the MAC addresses of devices connected to each switch port and the IP Addresses associated with the MACs. The browser page 'View MAC by Port' shows the MAC for the device found on each port, and the IP for the MAC presented if available. If more than one device is on that port, then the lowest alphanumeric of those MAC addresses is shown and underlined.

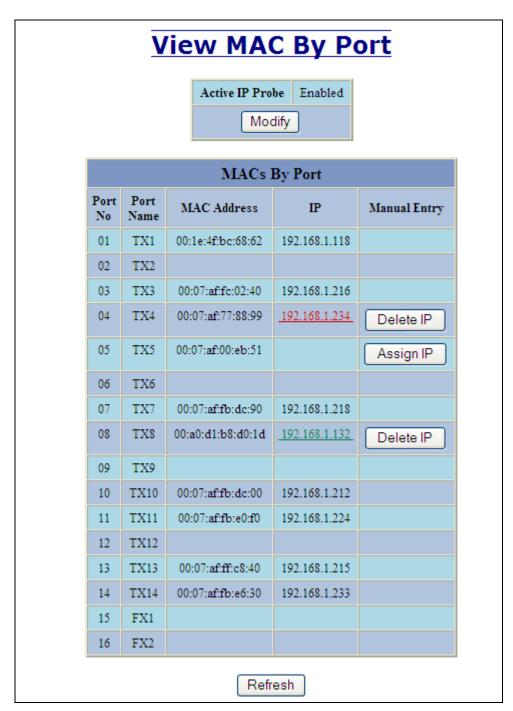

The 'Active IP Probe' field is configurable using the 'Modify' button, and also displays the existing Enabled or Disabled status of this feature. The default is disabled. When disabled the switch generates no Ethernet traffic for this purpose, but can still present some information gathered passively.

(Revised 8/5/2009) Page 55 of 133

The 'IP' field shows an Auto-detected or manually entered IP address. If there is a MAC address for the port and an IP address was not discovered there is an 'Assign IP' button to allow the user to enter an IP address. If 'Active IP Probe' is enabled, manually entered IP values are underlined and validated. A validated IP for that MAC is presented in green and if validation fails the IP will be red and underlined. Note that some devices do not have an IP Address, and that some devices that do have an IP Address may not respond to the methods used to detect their IP Address.

Invoking the 'Assign IP' button on the example above, the administrator will be presented with a form in which to enter a manually assigned IP, as below:


Assign IP					
MAC Address 00:07:af:00:eb:51					
IP Address	192.168.1.				
Update Cancel					

When an IP has been manually entered a button is provided to 'Delete IP', and invoking it will allow the administrator to delete the manual association of an IP to that MAC.

(Revised 8/5/2009) Page 56 of 133

RSTP – Configuration

The Configuration tab under the RSTP category will display the RSTP information for the first VLAN. Using the pull-down menu at the top of the page an administrator can choose which VLAN to configure RSTP on. Once the VLAN is selected, the administrator may configure the bridge by clicking on the 'Configuration' link in the middle of the page.

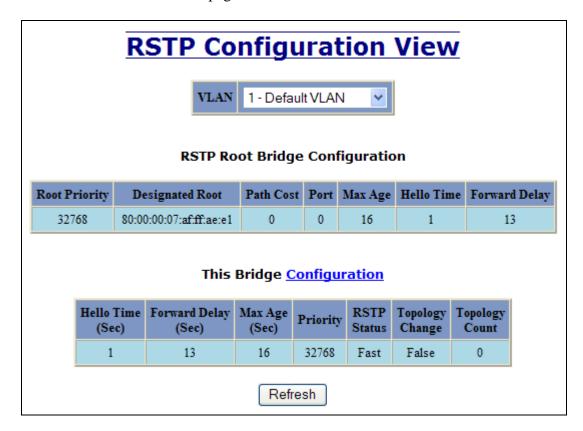

(Revised 8/5/2009) Page 57 of 133

RSTP – Configuration Continued...

The configuration screen for the VLAN that was previously selected will look like the example below. Here the administrator can make changes such as the Hello Time, Forward Delay, Max Age, Priority, and the Status of RSTP on that VLAN. The administrator or user can see the current RSTP status of the ports on that VLAN by clicking on the 'here' link to view RSTP Port Configuration at VLAN#.

RSTP Bridge Configuration For VLAN 1						
	VLAN	0001 - Default VLAN				
	Hello Time	1				
	Forward Delay	13				
	Max Age	16				
	Priority	32768				
	Status	Fast				
Click <u>here</u> to view the RSTP port Configuration at VLAN 1						
Update Cancel						

Note: It is recommended that RSTP rings consist of RSTP capable switches.

Trunking must be disabled in order to use RSTP.

Do not create redundant links unless either RSTP or N-Ring is enabled.

RSTP on overlapping VLANs is not supported and the system will automatically disable RSTP on the VLAN that has overlapping ports.


(Revised 8/5/2009) Page 58 of 133

RSTP – Configuration Continued...

Following the link for the view RSTP Port Configuration at VLAN#, the administrator or user can see the current RSTP status of the ports on that VLAN. This will show information such as the Path Cost and the Port State. If the switch sees a redundant path it will put the port with the highest Path Cost into Blocking mode where it will discard packets coming in on that port. In the example below, TX3 is a redundant port with port TX2, therefore TX2 is forwarding and TX3 is discarding.

	Bridge Port Configuration								
Port Port Port Port Path No Name State Cost Priority STP Auto Admin Designated Port Edge Edge Bridge Port									
<u>01</u>	TX1	Disabled	2000000	128	No	Enabled	Disabled	00:00:00:00:00:00:00	00:01
<u>02</u>	TX2	Forwarding	200000	128	No	Enabled	Disabled	80:00:00:07:af:ff:9c:e1	00:02
<u>03</u>	TX3	Discarding	200000	128	No	Enabled	Disabled	80:00:00:07:af:ff:9c:e1	00:02
<u>04</u>	TX4	Disabled	2000000	128	No	Enabled	Disabled	00:00:00:00:00:00:00	00:04
<u>05</u>	TX5	Disabled	2000000	128	No	Enabled	Disabled	00:00:00:00:00:00:00	00:05
<u>06</u>	TX6	Disabled	2000000	128	No	Enabled	Disabled	00:00:00:00:00:00:00	00:06
<u>07</u>	TX7	Forwarding	200000	128	No	Enabled	Disabled	80:00:00:07:af:ff:9c:e1	00:07
<u>08</u>	TX8	Disabled	2000000	128	No	Enabled	Disabled	00:00:00:00:00:00:00	00:08


If the administrator selects one of the ports on the previous screen, he or she can change the Port's Path Cost, Priority, and the status of Admin Edge and Auto Edge.

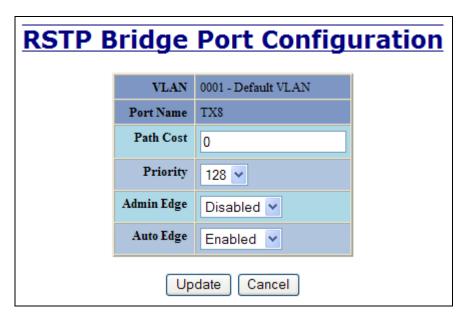


(Revised 8/5/2009) Page 59 of 133

IGMP – Configuration

The Configuration tab under the IGMP category will display the IGMP basic configuration settings. By default, IGMP is enabled.

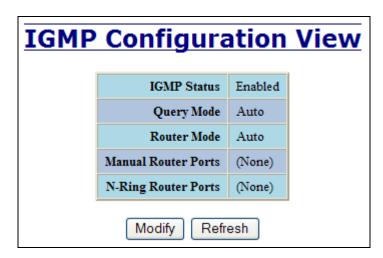


Following the Modify button, the administrator will see a list of configurable fields for the IGMP configuration. Once these fields are filled in to meet the needs of the administrator's network, the changes may be updated by clicking the Update button at the bottom of the page.

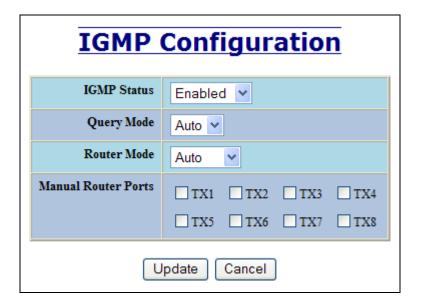


(Revised 8/5/2009) Page 60 of 133

IGMP - Configuration, Continued...

The IGMP Status pull-down allows the user to enable or disable IGMP completely.

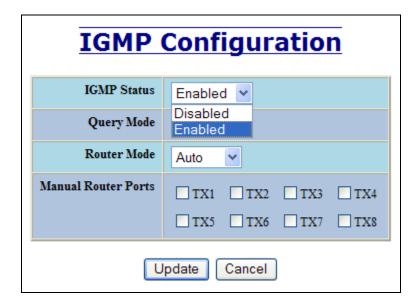


The Query Mode pull-down allows the user to set query mode for Automatic (the default), On (always), or Off (never):

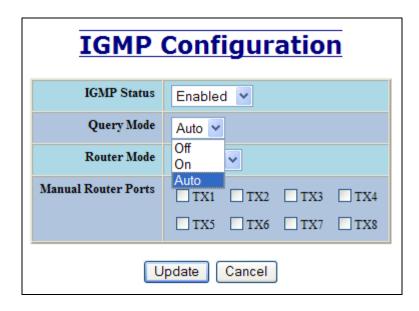


(Revised 8/5/2009) Page 61 of 133

IGMP - Configuration, Continued...

The Router Mode pull-down allows the user to choose router mode. 'Auto' allows for dynamically detected and manually set router ports. 'Manual' allows only for manually set router ports. 'None' allows no router ports.

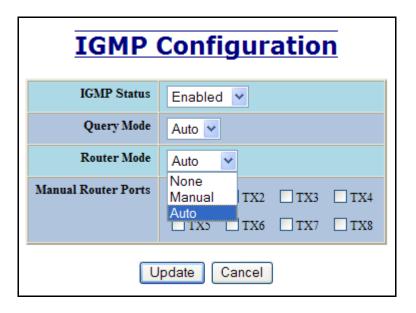

The user can specify the manual router ports:

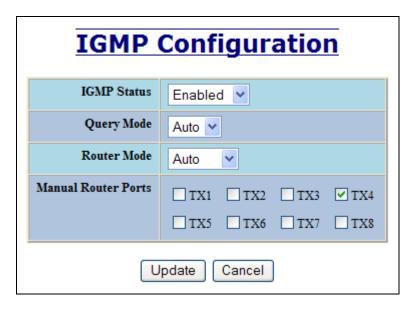


(Revised 8/5/2009) Page 62 of 133

IGMP – Show Group and Show Router

The Show Groups tab under the IGMP category will display a list of IGMP groups based on the Group IP and the port number that it is associated with.

IGMP (IGMP Group View					
Group IP	Port Name	VLAN ID				
224.10.10.10	TX1	1				
224.10.10.10	TX2	1				
224.10.10.11	TX3	1				
224.10.10.10	TX4	1				
224.10.10.10 TX5 1						
Refresh						

The Show Routers tab under the IGMP category will display a list of Auto-detected Router IPs and the port numbers that they are associated with.

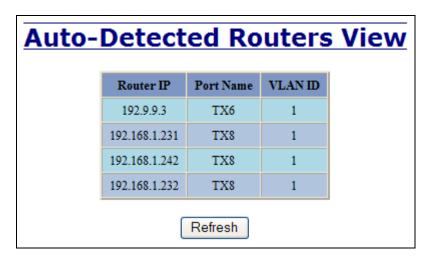

(Revised 8/5/2009) Page 63 of 133

IGMP - RFilter


The 'rfilter' (**Router Multicast Data Filter**) function allows you to choose whether or not DATA frames with KNOWN group multicast addresses are sent to the 'router' ports (links to other switches). Control packets (Join, Leave) will be sent to the router(s) regardless of this setting. "KNOWN" is known from dynamic IGMP Snooping operations.

The factory default is that the Router Multicast Data Filter is enabled for all ports, so any router ports do NOT get DATA frames with KNOWN multicast destination addresses unless a join to a specific multicast address has been received on that port. **Joins override an rfilter.**

If rfilter is disabled, router ports do get DATA frames with KNOWN multicast destination addresses

Rfilter can be set for individual ports: any, all, or none. For each port, rfilter will have an impact only if that port is manually or dynamically chosen as a router port.

Default configuration:

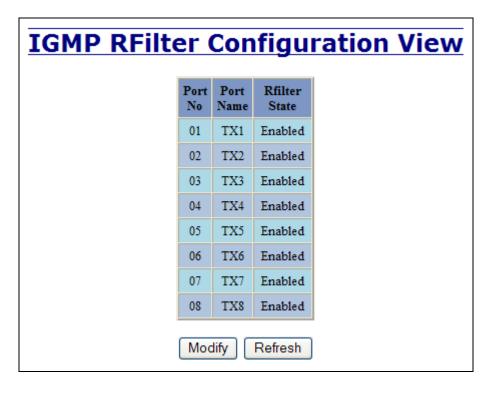

(Revised 8/5/2009) Page 64 of 133

IGMP-RFilter, Continued...


Modifying rfilter port settings:

IGMP RFilter Configuration							
	Port No	Port Name	Rfilter Enabled?				
	01	TX1	~				
	02	TX2	~				
	03	TX3	~				
	04	TX4	✓				
	05	TX5	✓				
	06	TX6	✓				
	07	TX7	✓				
	08	TX8	✓				
Update Cancel							

(Revised 8/5/2009) Page 65 of 133

N-View – Configuration

The Configuration tab under the N-View category will display two basic variables for N-View, the status and the interval between packets.

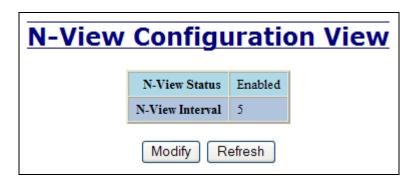

Following the Modify button on the above example, the administrator can modify the variable to change the frequency with which N-View reports information. Increasing the interval will slow the update rate. Decreasing the interval will allow N-View to report more frequently. Additionally, you may Disable or Enable N-View altogether.




(Revised 8/5/2009) Page 66 of 133

N-View - Ports

The Ports tab under the N-View category will display a list of all the configured ports on the 708 unit along with the ports transmitting multicast packets and MIB stats respectively.

N-View Ports View							
Port Name	Multicast On Port?	Send MIB Stats?					
TX1	YES	YES					
TX2	YES	YES					
TX3	YES	YES					
TX4	YES	YES					
TX5	YES	YES					
TX6	YES	YES					
TX7	YES	YES					
TX8	TX8 YES YES						
	Modify Refresh						

Following the Modify button on the above example, the administrator can modify these two variables to enable or disable multicast out of the port and if MIB stats are sent out for those ports.

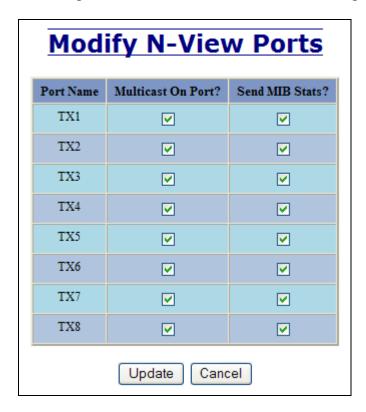

(Revised 8/5/2009) Page 67 of 133

N-Ring – Configuration

The Configuration tab under the N-Ring category will display the N-Ring basic configuration settings. By default, N-Ring is in Auto Member mode and the N-Ring Aging Time is 20 seconds.



Following the Modify button on the above example, the administrator will see a list of configurable fields for the N-Ring configuration, as below.



The N-Ring Aging Time has a default of 20 seconds and is separate from the Bridging Aging Time. N-Ring Aging Time is used when the switch is an N-Ring Manager or becomes an active N-Ring Member, and in either case N-Ring status includes for example:

"Switch is currently using N-Ring Aging Time = 20 Seconds"

Once these fields are filled in to meet the needs of the administrator's network, the changes may be saved by clicking the Update button at the bottom of the page.


NOTES:

- 1. N-Ring Manager cannot have RSTP or Trunking enabled.
- 2. RSTP & N-Ring are different modes and cannot share links or segments along those lines. See the examples in the RSTP configuration section.
- 3. Do not use Trunking on an N-Ring manager. Do not connect the N-Ring to actively Trunking ports on an Auto Member.
- 4. Do not create redundant links unless either RSTP or N-Ring is enabled.
- 5. Any one 708 can only participate in one N-Ring.
- 6. N-Ring copper ports must be run at 100Mb full duplex, including the default 'autonegotiate' as long as all switches in the ring support 100Mb full duplex.


(Revised 8/5/2009) Page 68 of 133

N-Ring – Configuration, Continued...

The "N-Ring Mode" is one of three, as below:

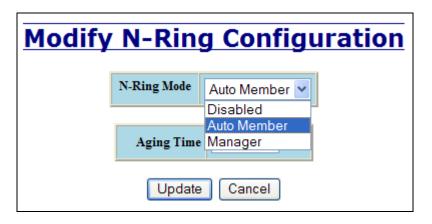

If N-Ring Mode is "Manager", then a pull-down allows selection as available of ports TX1 and TX2, or TX7 and TX8 (FX1 and FX2 on 708FX2) as N-Ring ports.

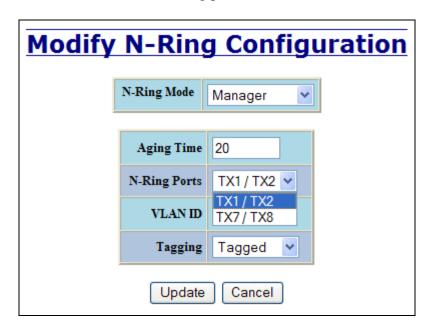


(Revised 8/5/2009) Page 69 of 133

N-Ring – Configuration, Continued...

If N-Ring Mode is "Manager", then VLAN ID can be set to a unique VLAN id (1 ~ 4094). Default is 3333.

If N-Ring Mode is "Manager", then a pull-down allows selection as to whether the N-Ring ports are members of the VLAN's Tagged or Untagged ports. Default is Tagged.

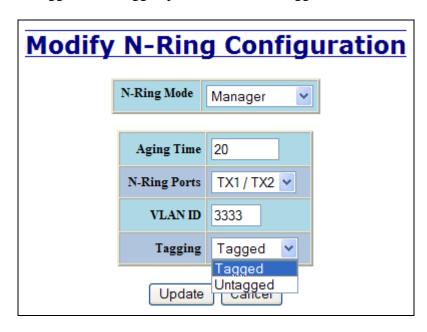

Once these fields are filled in to meet the needs of the administrator's network, the changes may be saved by clicking the Update button at the bottom of the page.

NOTES:

- 1. Since VLANs are implemented for security reasons as well as traffic flow, N-Ring only makes minimal changes. It is up to the administrator to ensure that VLANs are configured correctly on the N-Ring manager and all N-Ring members.
- 2. When the N-Ring manager and all N-Ring Members are in defaults, changing the N-Ring manager to use a Tagged VLAN requires no user interaction to allow non-ring traffic to pass through the ring. This works because changing to a Tagged VLAN does not remove the ring ports from the default VLAN.
- 3. When the N-Ring manager and all N-Ring Members are in defaults, changing the N-Ring manager to use an Untagged VLAN other than VID 1, requires the administrator to add non-ring ports to the N-Ring VLAN to allow non-ring traffic to pass through the ring. This occurs because the N-Ring ports must be removed from VID 1 because an untagged port may only be a member of one VLAN.

(Revised 8/5/2009) Page 70 of 133

N-Ring – Advanced Configuration


If switch is an N-Ring Member, the following data will be shown:

N-Ring Mode

Current N-Ring mode of switch.

Keep-Alive Timeout:

Keep-Alive timeout is used when switch is active in an N-Ring. The range is 5-1000000 seconds.

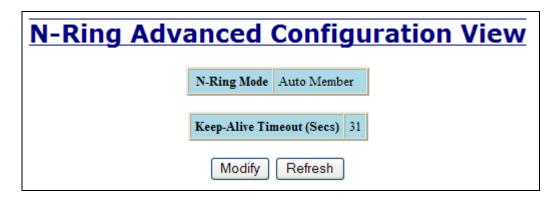



If switch is an N-Ring Manager, the following advanced configuration data will be shown:

N-Ring Mode

Current N-Ring mode of switch.

Self Health Packet Interval:

The amount of time to wait in milliseconds before sending Self-Health packets. The default is 10.

Maximum Missed Packets

The number of missed Self-Health packets that constitute a fault. The default is 2.

Sign-On Delay

The amount of time to wait in milliseconds before requesting initial sign-on information from ring members. The default is 1000.

Sign-On Match Packets

The number of times the switch count must match before starting the sign-on process. The default is 3.

Sign-On Interval

The interval of time to wait in milliseconds before requesting subsequent sign-on information from ring members when the ring is broken. The default is 3000.

Sign-On Info Spacing Multiplier

The amount of time to wait in milliseconds, scaled by switch number, before sending information to the ring manager. The default is 5.

Sign-On Info Retry Timeout


The amount of time the ring member will wait in milliseconds for the ring manager to acknowledge receipt of the member's information before the member tries to re-send the information. The default is 1500.

Delay Before Re-Entering Broken State

The amount of time, in milliseconds, that must elapse before the ring is allowed to go back into the broken state. The default is 3000.

(Revised 8/5/2009) Page 71 of 133

N-Ring - Advanced Configuration, Continued...

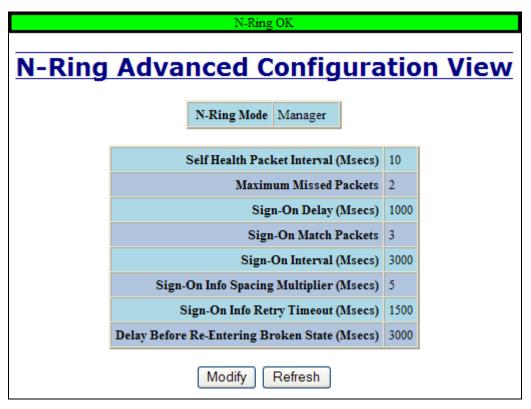



(Revised 8/5/2009) Page 72 of 133


N-Ring – Status

The Status tab under the N-Ring category will display the N-Ring status.

Below is an example of N-Ring Status from a switch in defaults (N-Ring Auto Member) that is not an N-Ring Manager and has not become an "Active" N-Ring Member:



Below is an example of N-Ring Status from an "Active" N-Ring Member:

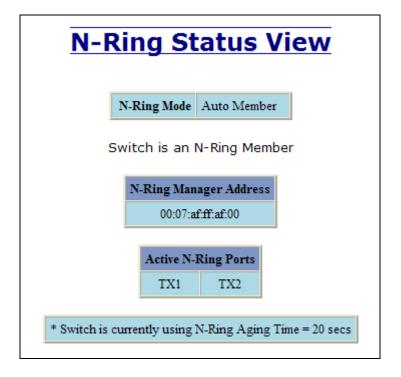

(Revised 8/5/2009) Page 73 of 133

Below is an example of N-Ring Status from an N-Ring Manager with a healthy N-Ring:

	N-Ring OK						
		N-Rii	ng Sta	tus Vi	ew		
		14 1411	.g	100			
S	witch is a	n N-Ring Man	ager, using	N-Ring Aging	g Time = 20 S	econo	ls
		c	Un	date F	Pause	Print	
Re	efresh eve	ery o s	ecs. Up	uate	ause	11116	
							_
	14 Activ	ve Members D	etected In	Current N-Ri	ng (14 report	ing)	
	Switch No	MAC Address	IP Address	Subnet Mask	Name	Ports	
	RM	00:07:af:ff:8a:80	192.168.1.108	255.255.255.0	N-Tron Switch	TX2 TX1	
	1	00:07:af:ff:c9:20	192.168.1.245	255.255.255.0	N-Tron Switch	TX2 TX1	
	2	00:07:af:ff:c8:80	192.168.1.226	255.255.255.0	N-Tron Switch	TX2 TX1	
	3	00:07:af:ff:8a:60	192.168.1.104	255.255.255.0	N-Tron Switch	TX2 TX1	
	4	00:07:af:ff:b8:00	192.168.1.225	255.255.255.0	N-Tron Switch	TX2 TX1	
	5	00:07:af:ff:8a:c0	192.168.1.101	255.255.255.0	N-Tron Switch	TX2 TX1	
	6	00:07:af:ff:af:20	192.168.1.235	255.255.255.0	N-Tron Switch	TX2 TX1	
	7	00:07:af:ff:8a:e0	192.168.1.100	255.255.255.0	N-Tron Switch	TX2 TX1	
	8	00:07:af:ff:8a:00	192.168.1.105	255.255.255.0	N-Tron Switch	TX2 TX1	
	9	00:07:af:ff:8f:e0	192.168.1.239	255.255.255.0	N-Tron Switch	TX2 TX1	
	10	00:07:af:ff:8c:00	192.168.1.126	255.255.255.0	N-Tron Switch	TX2 TX1	
	11	00:07:af:ff:8a:20	192.168.1.102	255.255.255.0	N-Tron Switch	TX2 TX1	
	12	00:07:af:ff:c8:60	192.168.1.249	255.255.255.0	N-Tron Switch	TX2 TX1	
	13	00:07:af:ff:8b:00	192.168.1.110	255.255.255.0	N-Tron Switch	TX2 TX1	
	14	00:07:af:ff:8e:60	192.168.1.127	255.255.255.0	N-Tron Switch	TX2 TX1	


(Revised 8/5/2009) Page 74 of 133

Below is an example of N-Ring Status from an N-Ring Manager with a faulted N-Ring. The red fields on the N-Ring Map show problems. Ports that are red indicate that the port is not linked. MAC addresses that are red indicate that there is no communication to that switch. The red "Ring Broken" line shows where the N-Ring is broken.

	N-Ring Fault						
		N. Di	Ct-	\/:			
		<u>M-KII</u>	ng Sta	<u>tus Vi</u>	<u>ew</u>		
-	witch is a	n N-Ring Man	ager using	N-Pina Agina	7 Time - 20 S	Secondo	
3	WILCII IS A	III N-King Man	ager, using	N-King Aging) Tille = 20 3	econus	,
Re	efresh eve	ery 6 s	ecs. Up	date	Pause	Print	
		,					
Th	e total nu	ımber of Activ	e N-Ring Me	embers is un	known. (13 re	eporting	3)
	Swi	tch order may be	incorrect and a	all switches may	y not be shown.		
	Switch No	MAC Address	IP Address	Subnet Mask	Name	Ports	
	RM	00:07:af:ff:8a:c0	192.168.1.101	255.255.255.0	N-Tron Switch	FX2 FX1	
	1	00:07:af:ff:c8:60	192.168.1.249	255.255.255.0	N-Tron Switch	FX2	
	_					FX1 FX2	
	2	00:07:af:ff:c9:20	192.168.1.245	255.255.255.0	N-Tron Switch	FX1	
	3	00:07:af:ff:8a:80	192.168.1.108	255.255.255.0	N-Tron Switch	FX2 FX1	
	4	00:07:af:ff:6d:00	192.168.1.211	255.255.255.0	N-Tron Switch	FX2	
	T	00.07.44.11.04.00	172.100.1.211	255.255.255.0	14-11011 5 WILCII	FX1 FX2	
	5	00:07:af:ff:75:80	192.168.1.207	255.255.255.0	N-Tron Switch	FX1	
	6	00:07:af:ff:75:60	192.168.1.205	255.255.255.0	N-Tron Switch	FX2 FX1	
	7	00.076.60.750	102 160 1 202	255 255 255 0	N-Tron Switch	FX2	
	7	00:07:af:ff:75:e0	192.168.1.203	255.255.255.0	N-110H SWICH	FX1	
	8	00:07:af:ff:76:00	192.168.1.234	255.255.255.0	N-Tron Switch	FX2 FX1	
			~~~~ Ring Bro	ken ~~~~			
	9	00:07:af:ff:6c:e0	192.168.1.210	255.255.255.0	N-Tron Switch	FX2 FX1	
	10	00:07:af:ff:75:e0	192.168.1.237	255.255.255.0	N-Tron Switch	FX2	
						FX1 FX2	
	11	00:07:af:ff:75:a0	192.168.1.206	255.255.255.0	N-Tron Switch	FX1	
	12	00:07:af:ff:c8:80	192.168.1.213	255.255.255.0	N-Tron Switch	FX2 FX1	
	13	00:07:af:ff:8f:c0	192.168.1.246	255.255.255.0	N-Tron Switch	FX2	
	15	00.07.41.11.01.00	192.100.1.240	233.233.0	14-110H SWITCH	FX1	
	14	00:07:af:ff:8a:20	192.168.1.102	255.255.255.0	N-Tron Switch	FX2 FX1	

(Revised 8/5/2009) Page 75 of 133

In rare cases an N-Ring can have a "Partial Fault". An example of this is to have a break in just one fiber in a duplex channel fiber pair. The screenshot below shows N-Ring Manager Status when a 'Higher' N-Ring Port (TX2, TX8/FX2) is not receiving self health frames all the way around the N-Ring, though the other (low TX1, TX7/FX1) N-Ring port is:

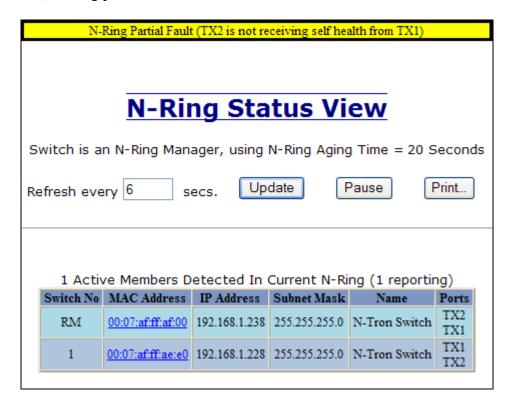

The screenshot below shows N-Ring Manager Status when a 'Lower' N-Ring Port (TX1 or TX7/FX1) is not receiving self health frames all the way around the N-Ring, though the other (high TX2 of TX8/FX2) N-Ring port is:


	N-Ring Partial Fault (TX1 is not receiving self health from TX2)						
	<b>N-Ring Status View</b>						
			_				
S	witch is a	n N-Ring Man	ager, using	N-Ring Aging	g Time = 20 S	econds	
Re	efresh eve	rv 6 se	ecs. Up	date	Pause	Print	
		.,					
		e Members D			ng (1 reportir		
	Switch No MAC Address IP Address Subnet Mask Name Ports						
	RM	00:07:af:ff:af:00	192.168.1.238	255.255.255.0	N-Tron Switch	TX2 TX1	
	1	00:07:af:ff:ae:e0	192.168.1.228	255.255.255.0	N-Tron Switch	TX1 TX2	

(Revised 8/5/2009) Page 76 of 133

## N-Link – Configuration

The purpose of N-Link is to provide a way to redundantly couple an N-Ring topology to one or more other topologies, usually other N-Ring topologies. Each N-Link configuration requires 4 switches: N-Link Master, N-Link Slave, N-Link Primary Coupler, and N-Link Standby Coupler.

#### **Standard N-Link Configuration (Example):**

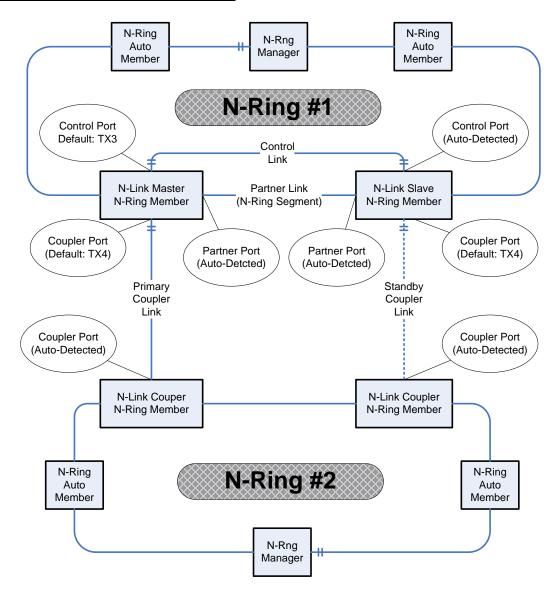


For convenience, a diagram similar to the above is provided in the switch's browser help for N-Link.

(Revised 8/5/2009) Page 77 of 133

#### N-Link - Configuration, Continued...

#### **Complex N-Link Configuration (Example):**

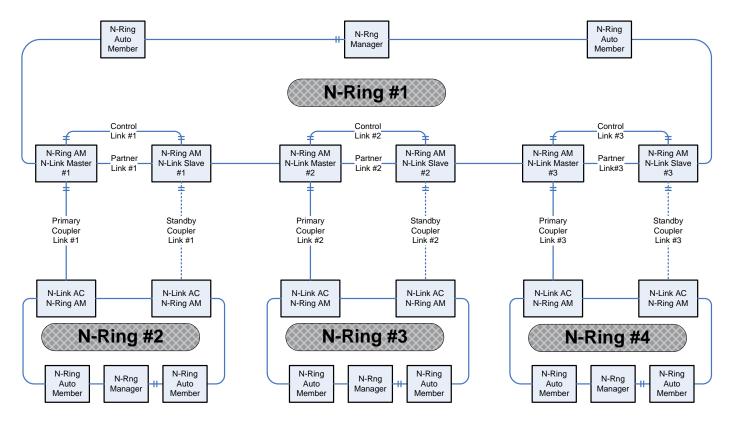

#### **Configuration Notes:**

- The Master and Slave must be part of the N-Ring topology.
- If using default configuration choices, the administrator only needs to configure the N-Link Master. The N-Link Slave and both Coupler switches will auto-detect any needed configuration.
- If not using default configuration choices, the administrator may also need to configure the Default Coupler port on the N-Link Slave.
- There must be a direct link between the Master and Slave Control ports. Use of media converters or other switches is not supported.
- There must be a direct link between the Master and Slave Partner ports. Use of media converters or other switches is not supported.
- There must be at least one other switch, besides the Master and Slave, that supports N-Link on the N-Ring.
- N-Link will only support a single point of failure. Multiple points of failure and misconfiguration are not supported and may cause a network storm under some circumstances.


#### **Configuration Steps to redundantly couple 2 N-Ring networks:**

- 1. Ensure the Coupler and Control cables are disconnected at this point.
- 2. Get Both N-Rings working with a status of OK.
- 3. Configure N-Link Slave: Ensure that the N-Link Slave is set to Auto Configure and select a Default Coupler Port. Save Configuration.
- 4. Configure N-Link Master: Select the Control and Coupler ports. Save the Configuration.
- 5. Connect the Control Link cable. Ensure that the Slave switch status now shows a state of "Slave"
- 6. Connect the Coupler Link cables.
- 7. Check N-Link status by selecting the N-Link Status View page.

(Revised 8/5/2009) Page 78 of 133

#### N-Link – Configuration, Continued...

The Configuration tab under the N-Link category will display the configuration settings. By default, N-Link is in Auto Configure mode and will use TX4 as the Default Coupler port.

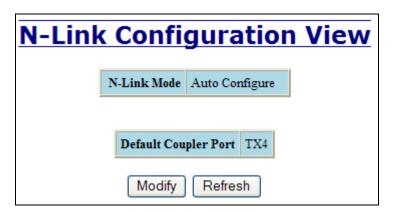

Following the Modify button on the above example, the administrator will see a list of configurable fields for the N-Link configuration, as below.




The port configured as the Default Coupler Port will be used as the Standby Coupler port if the switch detects an N-Link Master and becomes an N-Link Slave.

Once these fields are filled in to meet the needs of the administrator's network, the changes may be saved by clicking the Update button at the bottom of the page.


(Revised 8/5/2009) Page 79 of 133

## N-Link - Configuration, Continued...

The "N-Link Mode" is one of two choices, as below:

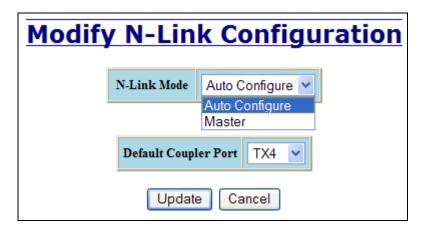

If N-Link mode is "Master", then the administrator must configure the Control Port (default: TX3) and the Primary Coupler Port (default: TX4).

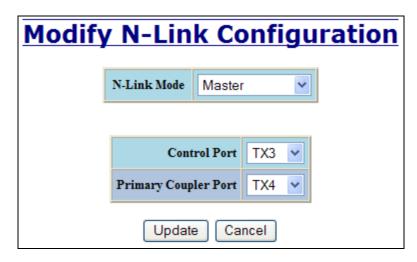

Once these fields are filled in to meet the needs of the administrator's network, the changes may be saved by clicking the Update button at the bottom of the page.

(Revised 8/5/2009) Page 80 of 133

#### N-Link - Status

The Status tab under the N-Link category will display the N-Link status.

If the switch is an N-Link Master or Slave, the following switch status and partner status information will be shown. Fields with a red background designate a fault condition.

State:	Current N-Link mode of switch.	
Control Port:	The port being used to convey control information. There must be a direct link between the Master and Slave Control ports. Use of media converters or other switches is not supported.	
Partner Port:  The port being used for normal communication between the Master and N-Link Slave switch. There must be a direct lin the Master and Slave Partner ports. Use of media converters switches is not supported. This port will be detected automatically.		
Coupler Port:	<b>Port:</b> The port being used to establish a redundant path for Ethernet data transmission.	
Coupler Port State:	State: Blocking, Forwarding.	
Status:	No errors will show "OK", otherwise a description of the Faults detected.	


#### N-Link Partner Information

State:	Current N-Link mode of switch.	
MAC:	The MAC Address of the N-Link Partner switch.	
<b>Coupler Port State:</b>	Blocking, Forwarding.	
Status:	No errors will show "OK", otherwise a description of the Faults detected.	

If switch is an N-Link Auto Configure and not a Slave, the Coupler port, if known, will be shown.


N-Link State:	Current N-Link mode of switch.	
_	The port used to establish a redundant path for Ethernet data	
transmission. This port will be detected automatically.		

Below is an example of N-Link Status from a switch in defaults (N-Link Auto Configure) that is not an N-Link Master and has not become an N-Link Slave or an N-Link Coupler:

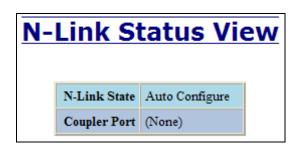


(Revised 8/5/2009) Page 81 of 133

Below is an example of N-Link Status from an N-Link Coupler switch:

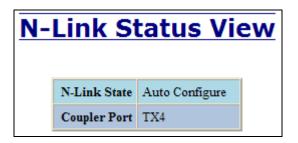


Below is an example of N-Link Status from an N-Link Master switch:

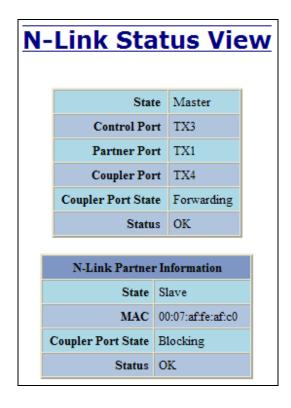


(Revised 8/5/2009) Page 82 of 133

Below is an example of N-Link Status from an N-Link Slave switch:

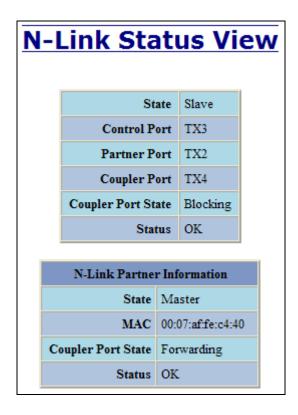


Below is an example of N-Link Status from an N-Link Master and Slave where the Primary Coupler link is broken:

## **N-Link Status View**

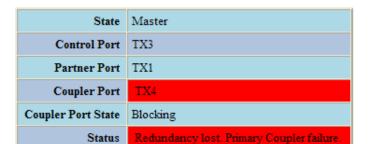



# **N-Link Status View**

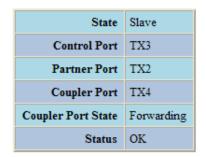



(Revised 8/5/2009) Page 83 of 133

Below is an example of N-Link Status from an N-Link Master and Slave where the Standby Coupler link is broken:

## **N-Link Status View**

## **N-Link Status View**

State	Master
Control Port	TX3
Partner Port	TX1
Coupler Port	TX4
Coupler Port State	Forwarding
Status	OK

State	Slave
Control Port	TX3
Partner Port	TX2
Coupler Port	TX4
Coupler Port State	Blocking
Status	Redundancy lost. Standby Coupler failure.


N-Link Partner Information			
State Slave			
MAC 00:07:af:fe:af:c0			
Coupler Port State	Coupler Port State Blocking		
Status Redundancy lost. Standby Coupler failure.			

N-Link Partner Information		
State Master		
MAC	00:07:af:fe:c4:40	
Coupler Port State	Forwarding	
Status	OK	


Below is an example of N-Link Status from an N-Link Master and Slave where the Control link is broken:

# **N-Link Status View**

# **N-Link Status View**

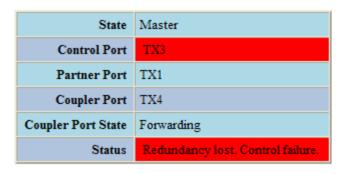

State	Slave
Control Port	TX3
Partner Port	TX2
Coupler Port	TX4
Coupler Port State	Blocking
Status	Redundancy lost. Control failure.

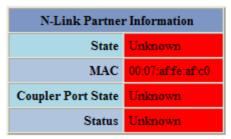

N-Link Partner Information		
State Unknown		
MAC	00:07:af:fe:c4:40	
Coupler Port State	Unknown	
Status Unknown		

(Revised 8/5/2009) Page 84 of 133

Below is an example of N-Link Status from an N-Link Master and Slave where the Partner link is broken:

# N-Link Status View N-Link Status View

State	Master
Control Port	TX3
Partner Port	(None)
Coupler Port	TX4
Coupler Port State	Forwarding
Status	Partner port is not know.

State	Slave
Control Port	TX3
Partner Port	(None)
Coupler Port	TX4
Coupler Port State	Blocking
Status	Partner port is not know.

N-Link Partner Information	
State Slave	
MAC	00:07:af:fe:af:c0
Coupler Port State Blocking	
Status Partner port is not know.	

N-Link Partner Information		
State	State Master	
MAC	00:07:af:fe:c4:40	
Coupler Port State	Forwarding	
Status Partner port is not know.		

(Revised 8/5/2009) Page 85 of 133

## Firmware/Config - TFTP


The TFTP tab under the Firmware/Config category gives the administrator the ability to upload or download a config file for a 700 Series switch. This allows administrators to backup their configurations to a server offsite in case they need to reload their custom configurations at a later time. Administrators are also given the ability to flash the switch allowing them to update the firmware in the field without losing their current configurations and without having to send the unit back to N-Tron for updates in the future. It is important not to cycle power on the switch or interrupt the data connection between the TFTP server and the switch while you are flashing or uploading/downloading a config file. The switch will not stop working if this does occur, but the administrator will have to retransfer the file.

TFTP - Firmware/Config		
Server IP Address	192.168.1.12	
File Name	Image	
Transfer Type	Download image from server	
Action Cancel		

(Revised 8/5/2009) Page 86 of 133

## **Support – Web Site and E-mail**

If at any point in time you get confused or would like additional support directly from N-Tron, you may visit N-Tron's web site, or e-mail N-Tron directly with the links provided for more information.

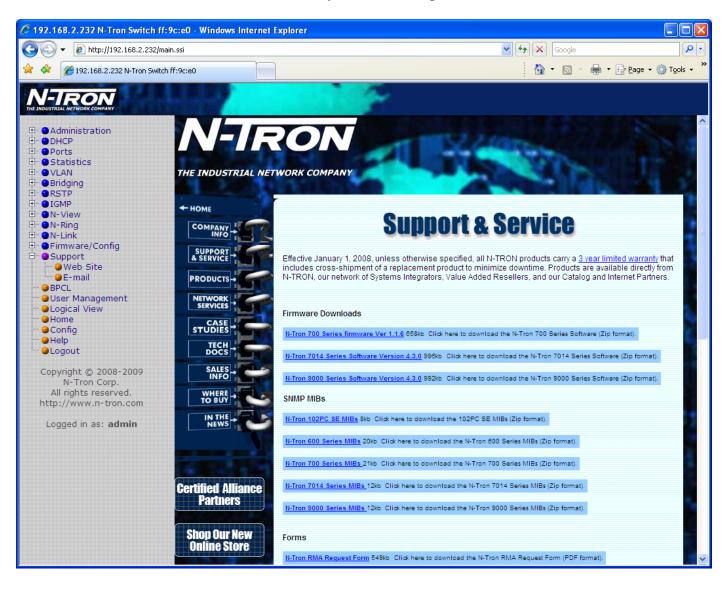


(Revised 8/5/2009) Page 87 of 133

## **BPCL – Broadcast Packet Count Limit Configuration**

The BPCL link will display all the ports that are installed in the 700 Series unit and will list the BPCL Percentage for each port. BPCL defaults to 3%. A Modify button is provided to change these fields.

ount	Limi
Port Name	BPCL [%]
TX1	3
TX2	3
TX3	3
TX4	3
TX5	3
TX6	3
TX7	3
TX8	3

Following the Modify button on the above example, the administrator can modify the BPCL Percentage for each and every port.

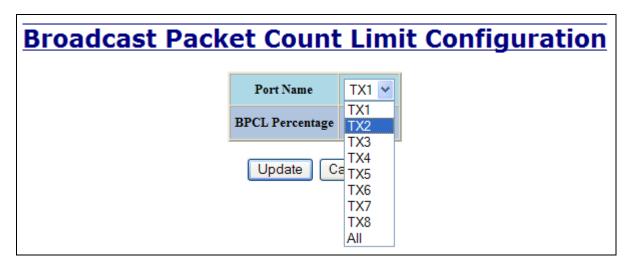

(Revised 8/5/2009) Page 88 of 133

## **User Management – Adding Users**

The User Management link will display a list of all the users who have access to the management features of the switch and their access permissions.



Following the Add button on the above example, the administrator can add another user and assign the user a username, a password, and the user's permissions (user/administrator).



A page should display after the administrator clicks the Add button indicating that the user was successfully added.



(Revised 8/5/2009) Page 89 of 133

## **User Management – Removing Users**

In order to remove a user, simply click on the Remove button at the bottom of the page.



Following the Remove button on the above example, the administrator can remove a user by entering in the user's name and clicking the Remove button.



A page should follow indicating that the user was successfully removed from the list.




**Note:** There are a maximum number of 5 users per switch. User permissions have the right to view switch configurations and to view current port settings, but cannot make any changes to these settings. Admin permissions have the right to change and view any switch configuration and to change and view any current port settings.

(Revised 8/5/2009) Page 90 of 133

## LogicalView

The 708 Web Management offers a logical view of the switch. Here a user or administrator can see a graphical depiction of the 708 switch. Ports that are linked will appear in green, while ports that are not linked will appear in black. The example below shows ports 1, 2, and 8 linked. The other ports are currently in the down state (not being used).

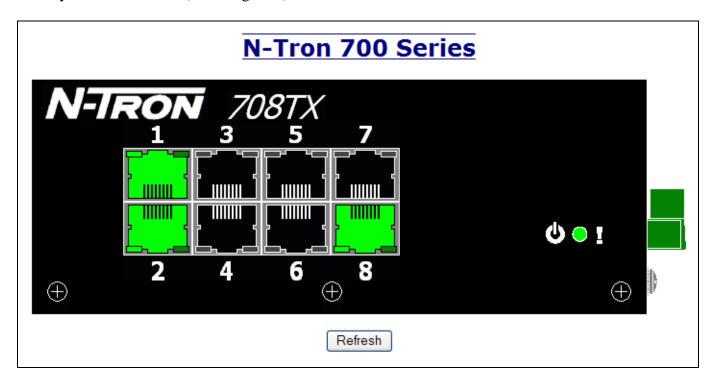

(Revised 8/5/2009) Page 91 of 133

## **Configuration – Save or Reset**

The Configuration section of web management gives an administrator the ability to save a running configuration into the NVRAM. This step is needed in order for the switch to remember any changes after a power cycle.

The "Save" button will save all current changes to the configuration for use after the next power cycle.


The "Reset" button will discard all unsaved changes, reset the switch and load the most recently saved configuration settings.

The "Factory" button will reload N-Tron's factory default configuration settings. Doing so will reconfigure the 700 Series switch to factory defaults. In many cases it is desirable to restore factory defaults but retain certain settings. Checkboxes are provided to select the desired behavior.

C	onfiguration Save Or Reset
	Click "Save" button to save changes to the configuration.
	Save
Click "Reset"	button to reset the switch and load the most recently saved configuration.
	Reset
	Click "Factory" button to reset switch to factory defaults.
	Keep current IP address, subnet mask, and gateway.
	Keep current user names and passwords.
	Keep currently stored SNMP settings.
	Keep currently stored DHCP Server settings.
	Factory

(Revised 8/5/2009) Page 92 of 133


## Help - DHCP

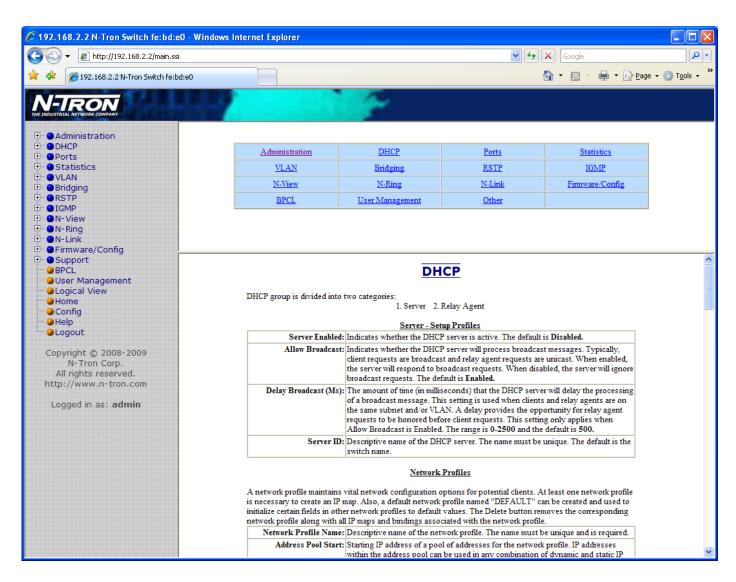

Following the DHCP link on the help page, the administrator or user can see some information regarding the configuration options under the DHCP categories on the left side of the web management.

(Revised 8/5/2009) Page 93 of 133


## Help - Ports

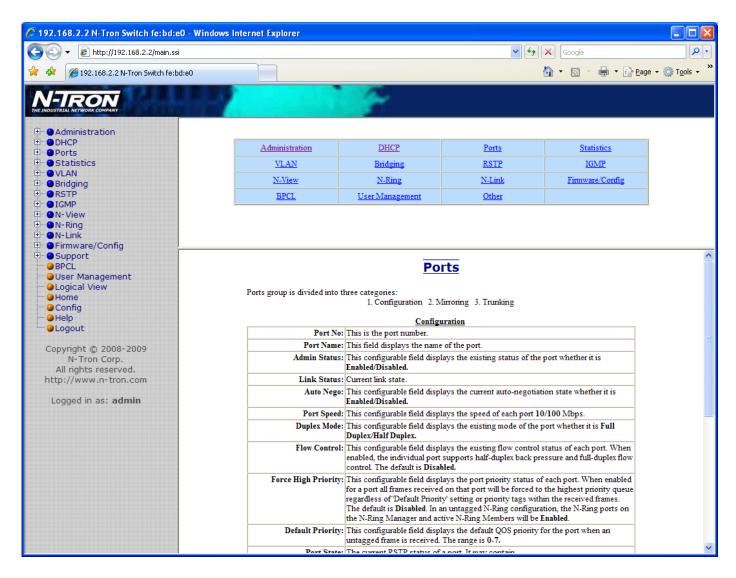

Following the Ports link on the help page, the administrator or user can see some information regarding the configuration options in the Ports category on the left side of the web management.

(Revised 8/5/2009) Page 94 of 133


## **Help – Statistics**

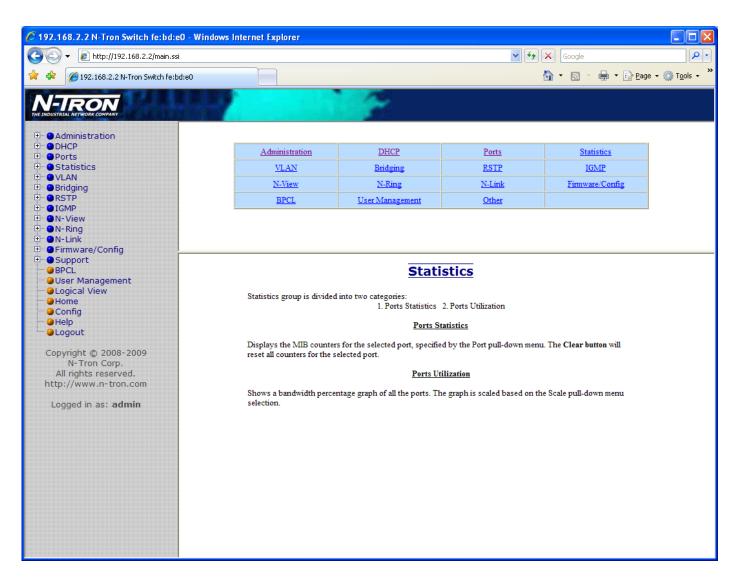

Following the Statistics link on the help page, the administrator or user can see some information regarding the configuration options in the Statistics category on the left side of the web management.

(Revised 8/5/2009) Page 95 of 133


## Help - VLAN

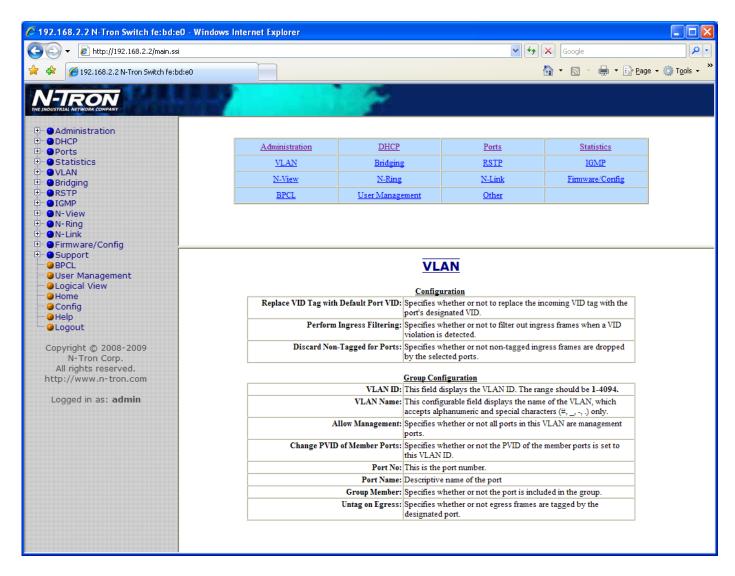

Following the VLAN link on the help page, the administrator or user can see some information regarding the configuration options in the VLAN category on the left side of the web management.

(Revised 8/5/2009) Page 96 of 133


## Help - BPCL

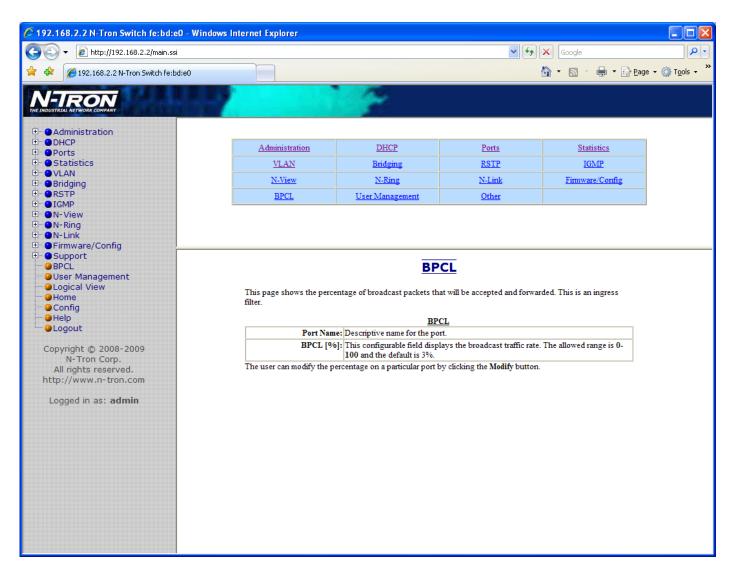

Following the BPCL link on the help page, the administrator or user can see some information regarding the configuration options in the BPCL category on the left side of the web management.

(Revised 8/5/2009) Page 97 of 133


#### Help - IGMP

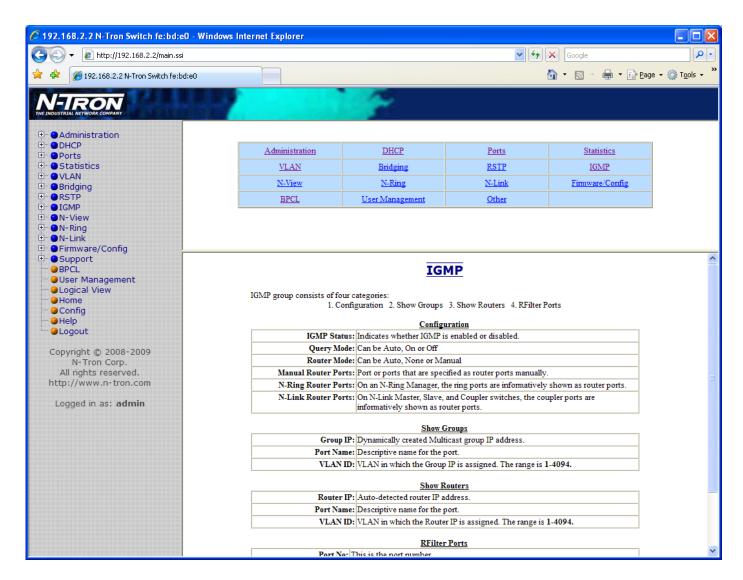

Following the IGMP link on the help page, the administrator or user can see some information regarding the configuration options in the IGMP category on the left side of the web management.

(Revised 8/5/2009) Page 98 of 133


## Help - Bridging

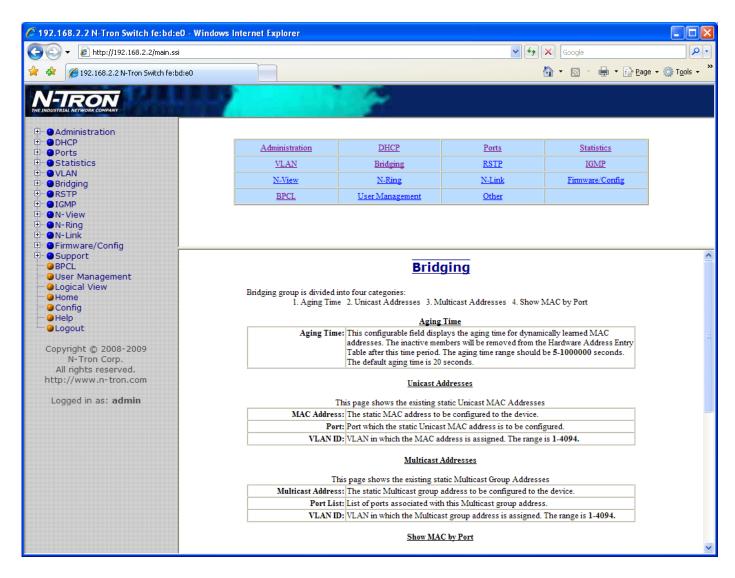

Following the Bridging link on the help page, the administrator or user can see some information regarding the configuration options in the Bridging category on the left side of the web management.

(Revised 8/5/2009) Page 99 of 133


#### Help - RSTP

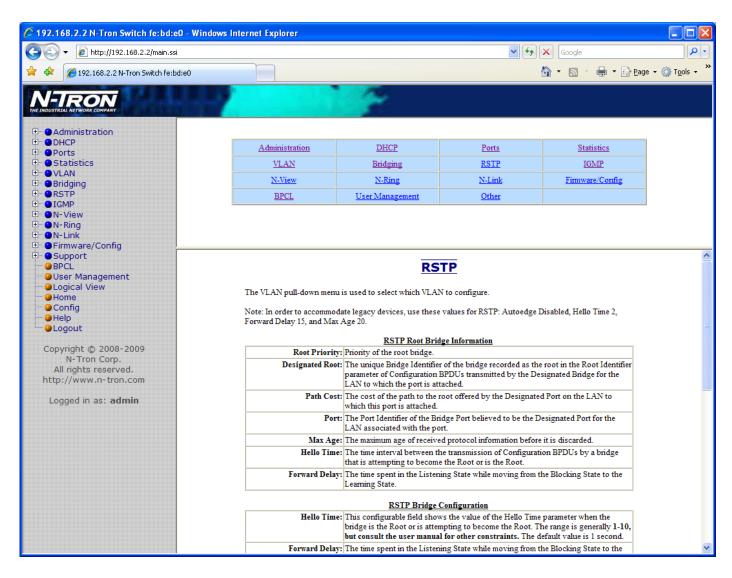

Following the RSTP link on the help page, the administrator or user can see some information regarding the configuration options in the RSTP category on the left side of the web management.

(Revised 8/5/2009) Page 100 of 133


## Help - Firmware/Config

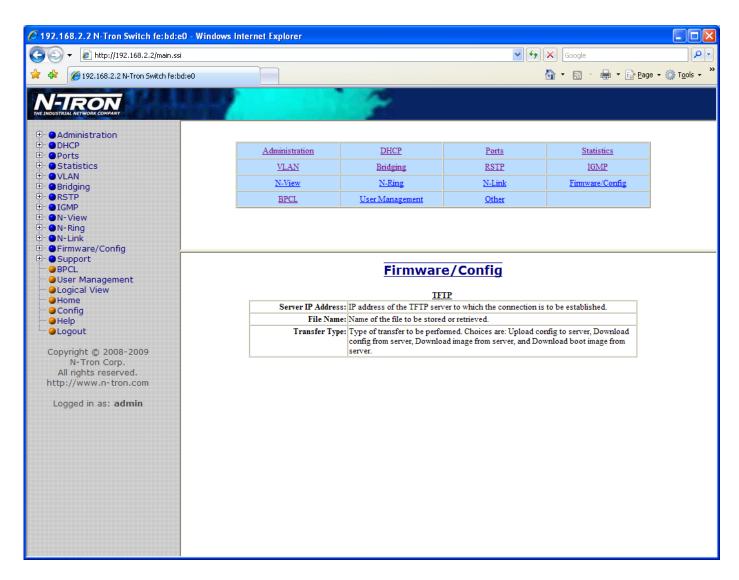

Following the Firmware/Config link on the help page, the administrator or user can see some information regarding the configuration options in the Firmware/Config category on the left side of the web management.

(Revised 8/5/2009) Page 101 of 133


## Help - User Management

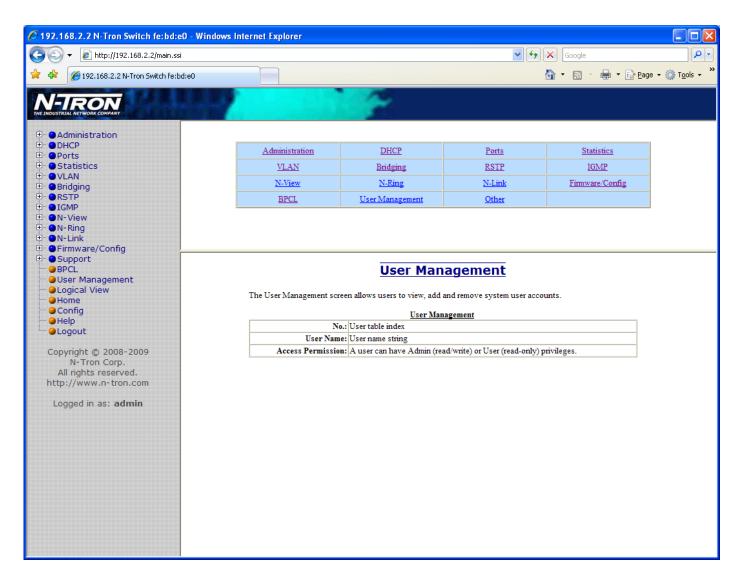

Following the User Management link on the help page, the administrator or user can see some information regarding the configuration options in the User Management category on the left side of the web management.

(Revised 8/5/2009) Page 102 of 133


## Help – N-View

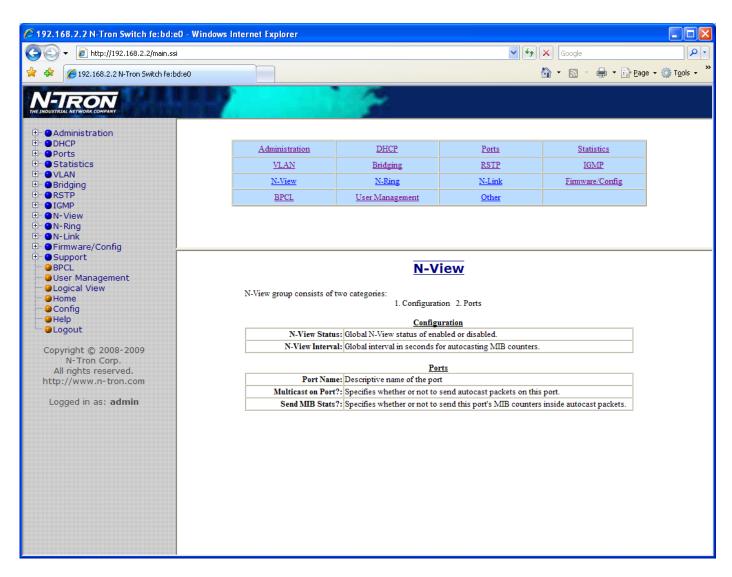

Following the N-View link on the help page, the administrator or user can see some information regarding the configuration options in the N-View category on the left side of the web management.

(Revised 8/5/2009) Page 103 of 133


## Help - N-Ring

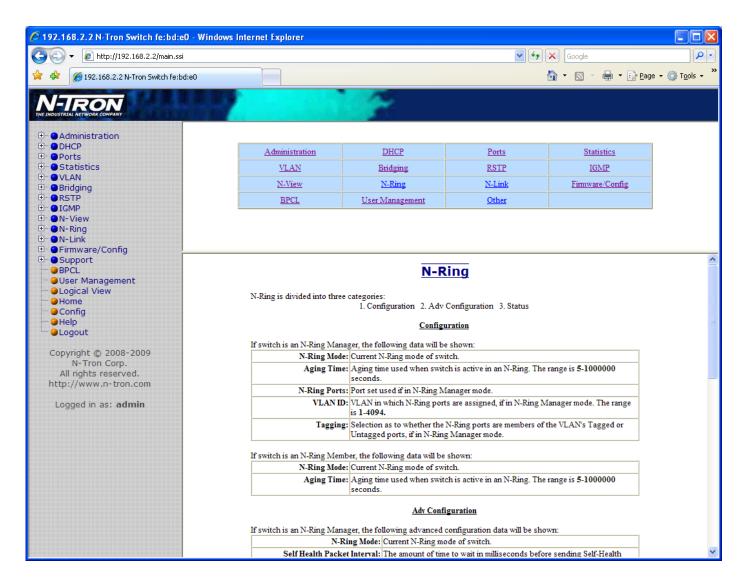

Following the N-Ring link on the help page, the administrator or user can see some information regarding the configuration options in the N-Ring category on the left side of the web management.

(Revised 8/5/2009) Page 104 of 133


## Help - N-Link

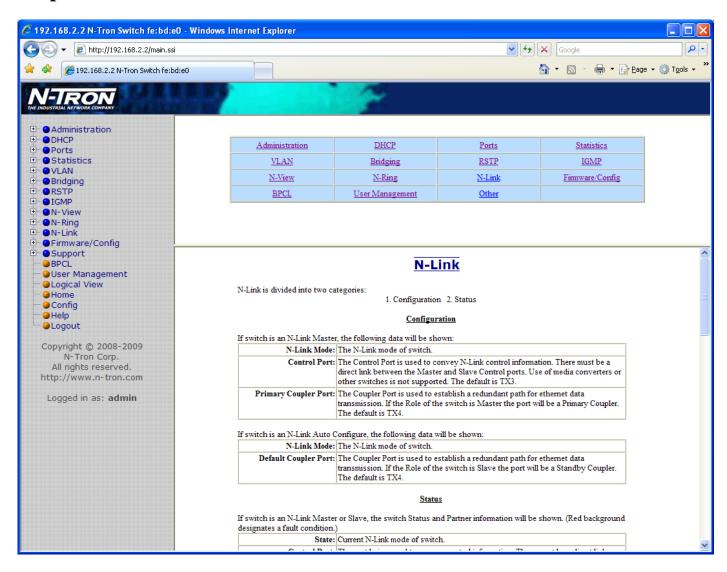

Following the N-Link link on the help page, the administrator or user can see some information regarding the configuration options in the N-Link category on the left side of the web management.

(Revised 8/5/2009) Page 105 of 133

## Help - Other

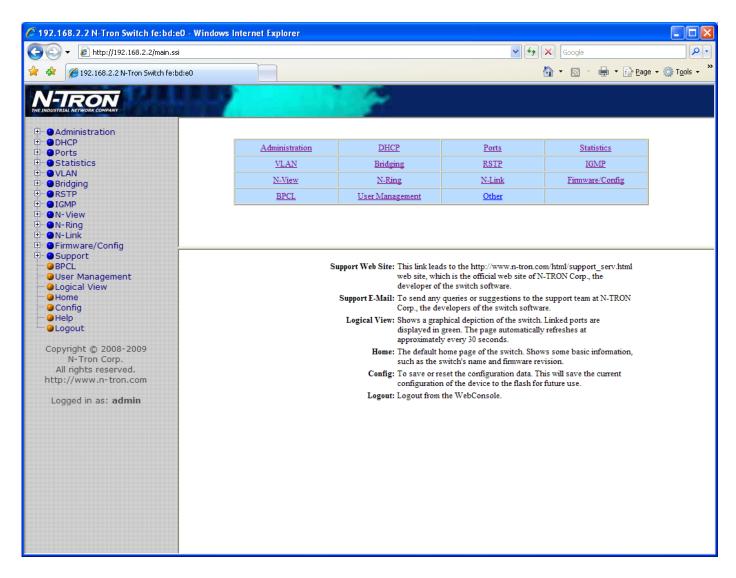

Following the Other link on the help page, the administrator or user can see some information regarding other links or categories on the left hand side of the web manager, as above.

(Revised 8/5/2009) Page 106 of 133

## **CLI Commands**

#### "?" (Help)

Command Name	"?"
Description	Show a list of all commands or get help on a specific command.
	Without <i>cmd</i> , this command will list all the available commands.
	If we discoverified and if it matches a small command the reason of the command will
	If <i>cmd</i> is specified and if it matches a specific command, the <b>usage</b> of the command will be displayed; otherwise, if <i>cmd</i> matches the prefix of a command, the name of the
	command will be listed.
	If ? is preceded by another ?, the usage and description of this command will be
_	displayed.
Syntax	? [cmd]
Parameters	The command for which to get help.
Examples	N-TRON/Admin> ?
<b>F</b>	The above command displays all the available commands.
	N-TRON/Admin> abcd ?
	Unknown Command: "abcd"
	Type "?" for a list of available commands.
	N-TRON/Admin> logout ?
	Logout
	Log out of console interface.
	SYNTAX:
	Logout
	v mpov/admins p mi
	N-TRON/Admin> ? pi
	Ping
	Ping a host.
	N-TRON/Admin> ? ?
	Show a list of all commands or get help on a specific command.
	SYNTAX:
	? [cmd]
	OPTIONS:
	cmd: The command for which to get help.
NOTES	

#### Logout

Command Name	logout
Description	Log out of console interface
Syntax	logout
Parameters	None
Examples	N-TRON/Admin> logout
NOTES	

(Revised 8/5/2009) Page 107 of 133

# **CLI Commands, Continued...**

#### Show, Add, or Delete ARL Entries

Command Name	arl	
Description	Show, Add, or Delete Arl Entries.	
Syntax	arl show   showmet   add mac port epu static vid   del[ete] mac vid	
Parameters	show Show entire ARL table. showmct Show entire ARL MCT (Multicast Index) table. delete Delete MAC address. add Add MAC address. mac MAC Address. port Port Number. cpu 1 = Send to CPU also. static 1 = This is a static address; 0 = Non-Static. vid	
	VLAN ID (0-4095)	
Example	N-TRON/Admin> arl show	
	No. Val Age Pri Mod Usr Sta VLAN MAC Port(s)	
	1 1 1 0 0 0 1 1 00:07:af:ff:b8:00 CPU 2 1 0 0 0 0 1 00:19:b9:03:aa:77 TX3	
	N-TRON/Admin> arl showmct	
	No. Idx Val Port Mask Port(s)	
	1 0 1 0x00000000 (None) 2 1 1 0x00000001 TX1	
	N-TRON/Admin> arl add 00:19:b9:03:aa:79 3 0 1 1	
	N-TRON/Admin> arl del 00:19:b9:03:aa:79 1	
Notes		
	-	

(Revised 8/5/2009) Page 108 of 133

### **Save or Reset the Configuration Settings**

Command Name	config
Description	Save or reset configuration settings
Syntax	config s[ave]   r[eset]
Parameters	save
	save current running configuration settings.
	reset
	reset configuration settings to factory defaults.
Examples	N-TRON/Admin> config save
	Save Settings
	Settings have been saved.
	N-TRON/Admin> config reset
	Resetting to factory defaults
	Load factory default settings [y/n]?y
	Keep IP, subnet mask, and gateway addresses [y/n]?y
	Keep current user names and passwords [y/n]?y
NOTES	III
NOTES	

#### **Show or Set IGMP Configuration**

Comment 1 November 1 November 2	
Command Name	igmp
Description	Show or set IGMP configuration. If no parameters are specified, this command will show
	the IGMP configuration (same as -show parameter).
Syntax	igmp [-show] [-status state]
Parameters	-show
	Show configuration.
	-status state
	Set the IGMP status to e(nabled) or d(isabled).
Examples	N-TRON/Admin> igmp -show
•	
	IGMP Status : Enabled
	Query Mode : Auto
	Router Mode : Auto
	Manual Router Ports : (None)
	N-TRON/Admin> igmp -status disabled
	IGMP Status : Disabled
	Query Mode : Auto
	Router Mode : Auto
	Manual Router Ports : (None)
	Changes have been made that have not been saved.
NOTES	

(Revised 8/5/2009) Page 109 of 133

#### **Show or Set Mirror Configuration**

Command Name	Mirror
Description	Show or set Mirror configuration. If no parameters are specified, this command will
	show the Mirror configuration (same as -show parameter).
Syntax	mirror [-show] [-status state] [-dp portno] [-tx portlist] [-rx portlist]
Parameters	-show
	Show configuration.
	-status state
	Set the Mirror status to e(nabled) or d(isabled).
	-dp portno
	Set the destination port number for mirrored frames.
	-tx portlist
	Set the source ports to mirror frames that are transmitted.
	-rx portlist
	Set the source ports to mirror frames that are received.
Examples	N-TRON/Admin> mirror -show
	Mirror Status : Disabled
	Destination Port : TX1
	Tx Source Ports : (None)
	Rx Source Ports : (None)
	N-TRON/Admin> mirror -status enabled -dp 6 -tx 1,3-5 -rx 1,3,5
	Mirror Status : Enabled
	Destination Port : TX6
	Tx Source Ports : TX1, TX3-TX5
	Rx Source Ports : TX1, TX3, TX5
	Changes have been made that have not been saved.
NOTES	The portlist consists of port numbers and ranges, separated by commas. It may not
NOTES	contain space characters. Use "all" to set all ports as source ports, and use "none" to clear
	all ports from source ports.
	an ports from source ports.

(Revised 8/5/2009) Page 110 of 133

### **Show or Set N-Ring Configuration**

Command Name	Nring
Description	Show or set N-Ring configuration. If no parameters are specified, this command will
•	show the N-Ring configuration (same as -show parameter).
Syntax	nring [-show] [-mode d   a   m] [-ports set_id]
Parameters	-show
	Show configuration.
	-mode
	Set the N-Ring mode.
	d = disabled, $a = auto member$ , $m = manager$
	-ports set_id
	Set the ring ports for N-Ring manager mode.
	Specify port set identifier or use '?' to list available port sets.
Examples	N-TRON/Admin> nring -show
	M. Dinas Mada at Buta Mandaga
	N-Ring Mode : Auto Member Aging Time : 20
	Aging time · 20
	N-TRON/Admin> nring -ports ?
	ID Port Set
	 1 TX1 / TX2
	1 TX1 / TX2 2 TX7 / TX8
	2 1117 / 1110
	N-TRON/Admin> nring -mode m -ports 2
	Do you Want to Save Changes and Restart the System Now $[y/n]$ ?
NOTES	

### **Show or Set N-View Configuration**

Command Name	Nview
Description	Show or set N-View configuration. If no parameters are specified, this command will
	show the N-View configuration (same as -show parameter).
Syntax	nview [-show] [-status state]
Parameters	-show
	Show configuration.
	-status state
	Set the N-View status to e(nabled) or d(isabled).
Examples	N-TRON/Admin> nview -show
	27 77 C)
	N-View Status : Enabled
	N-View Interval : 5
	N-TRON/Admin> nview -status disabled
	N-View Status : Disabled
	N-View Interval : 5
	Changes have been made that have not been saved.
	••
NOTES	

(Revised 8/5/2009) Page 111 of 133

### Ping a Host

Command Name	Ping
Description	Ping a host
Syntax	ping [-t] [-n count] [-w timeout] target_name
Parameters	target_name
	IP Address or host name.
	-t
	Ping the specified host until stopped.
	To see statistics and continue - type Space;
	To stop - type Control-C.
	-n count
	Number of echo requests to send.
	-w timeout
	Timeout in milliseconds to wait for each reply.
Example	N-TRON/Admin> ping 192.168.1.119
	 N-TRON/Admin> ping -n 6 192.168.1.119
	N-IRON/Admill> ping -n 0 192.100.1.119
	N-TRON/Admin> ping -t 192.168.1.119
	N-TRON/Admin> ping -w 2000 192.168.1.119
	Reply from 192.168.1.119: time=970ms
	Reply from 192.168.1.119: time<10ms
	Reply from 192.168.1.119: time<10ms
	Ping statistics for 192.168.1.119:
	Packets: Sent = 4, Received = 3, Lost = 1 (25% loss)
	Approximate round trip times in milliseconds:
	Minimum = 0ms, Maximum = 970ms, Average = 320ms
Notes	

(Revised 8/5/2009) Page 112 of 133

### **Show or Set Port Configuration**

Command Name	Port
Description	Show or set Port configuration.
Syntax	<b>port</b> [-show] [-admin state] [-sd auto   10h   10f   100h   100f   1000h   1000f]
	[-flow state] [-fhp state] [-dp prio] [-pvid vid] portno
Parameters	portno
	Port number to configure or show. Specify "all" to show all ports.
	-show
	Show configuration.
	-admin state
	Set the admin status for the port to e(nabled) or d(isabled).
	-sd
	Set the speed and duplex mode for the port.
	auto = enable auto-negotiation
	-flow state
	Set the flow control for the port to e(nabled) or d(isabled).
	-fhp state
	Set force high priority for the port to e(nabled) or d(isabled).
	-dp
	Set the default QOS priority for the port. The range is 0-7.
	Set the VLAN ID for the port. The range is 1-4094.
Examples	N-TRON/Admin> port -sd 100f -flow enabled -dp 7 -pvid 2 5
	Port Port Admin Link Auto Port Dupl Flow Force Def Port No Name Status Stat Nego Spd Mode Control High Pri Pri State PVID
	5 TX5 Enabled Down Disabled 100 Full Enabled Disabled 7 Disabled 2
	Changes have been made that have not been saved.
NOTES	

### **Reset the Switch**

TREBUT CHIC DIVITORI	
Command Name	Reset
Description	Reset (reboot) the switch
Syntax	Reset
Parameters	None
Example	N-TRON/Admin> reset
	Performing Soft-Reset
Notes	

(Revised 8/5/2009) Page 113 of 133

### **Show or Set SNMP Configuration**

Command Name	Snmp
Description	Show or set SNMP configuration. If no parameters are specified, this command will
	show the SNMP configuration (same as -show parameter).
Syntax	snmp [-show] [-ro name] [-rw name] [-trap name]
Parameters	-show
	Show configuration.
	-ro name
	Set the Authorized Community Name for SNMP Get requests.
	-rw name
	Set the Authorized Community Name for SNMP Set requests.
	-trap name
	Set the Authorized Community Name for SNMP Traps.
Examples	N-TRON/Admin> snmp -ro users
	IP Address - Trap Stn.#1 : Value Not Configured IP Address - Trap Stn.#2 : Value Not Configured
	IP Address - Trap Stn.#2 : Value Not Configured  IP Address - Trap Stn.#3 : Value Not Configured
	IP Address - Trap Stn.#4 : Value Not Configured
	IP Address - Trap Stn.#5 : Value Not Configured
	Read-Only Community Name : users
	Read-Write Community Name : private
	Trap Community Name : public
	Changes have been made that have not been saved.
NOTES	Community names may only contain alphanumeric, space, '-', '_', and '#' characters,
	and may not begin with a number, space, or underscore. A name with embedded space
	characters must be enclosed in quotes. The maximum length is 15 characters.

### **Show or Clear the Last System Error**

Show or Clear the Last System Error	
Command Name	Syserr
Description	Show or clear the last system error
	If <i>clear</i> is not supplied, then the last system error is displayed.
Syntax	syserr [clear]
Parameters	Clear
	Clear the last system error.
Example	N-TRON/Admin> syserr
•	Last System Error: None.
	N-TRON/Admin> syserr clear
	Last System Error: Cleared.
Notes	

(Revised 8/5/2009) Page 114 of 133

#### **Show System Information**

Command Name	Sysinfo
Description	Show system information
Syntax	Sysinfo
Parameters	None
Example	N-TRON/Admin> sysinfo
	++++++++++++++++++++++++++++++++++++++
Notes	

(Revised 8/5/2009) Page 115 of 133

**Set or Show the System IP Configuration** 

Command Name	Sysip
Description	Set system IP configuration mode, IP address, subnet mask, and gateway
	If no parameters are specified, this command will show the system IP addresses. Static
	IP, subnet mask, or gateway can only be set while in static configuration mode. All
	system addresses must be formatted as: xxx.xxx.xxx.
Syntax	sysip [-c config_mode] [-i static_ip] [-s static_subnet_mask] [-g static_gateway]
Parameters	-c config_mode
	s(tatic) or d(hcp).
	-i static_ip
	Static IP address ( for static config mode ).
	-s static_subnet_mask
	Static sub net mask ( for static config mode ).
	-g static_gateway
	Static gateway address ( for static config mode ).
Example	N-TRON/Admin> sysip
	IP Configuration Mode : Static
	Static IP Address : 192.168.1.225
	Static subnet Mask : 255.255.255.0
	Static gateway : 192.168.1.1
	N-TRON/Admin> sysip -c dhcp
	IP Configuration Mode: DHCP (has been changed)
	Static IP Address : 192.168.1.225
	Static subnet Mask : 255.255.0
	Static gateway : 192.168.1.1
	Do you Want to Save Changes and Restart the System Now [y/n]?
	N-TRON/Admin> sysip -i 192.168.1.119 -s 225.225.225.0 -g 192.168.1.1
	IP Configuration Mode : Static
	Static IP Address : 192.168.1.119 (has been changed)
	Static subnet Mask : 225.225.225.0 (has been changed) Static gateway : 192.168.1.1 (has been changed)
	Static gateway : 192.168.1.1 (has been changed)
	Do you Want to Save Changes and Restart the System Now [y/n]?
NOTES	

(Revised 8/5/2009) Page 116 of 133


### **Show or Set System Configuration**

Command Name	System
Description	Show or set System configuration. If no parameters are specified, this command will
	show the System configuration (same as -show parameter).
Syntax	system [-show] [-name label] [-browser state]
Parameters	-show
	Show configuration.
	-name label
	Set the switch name.
	-browser state
	Set the browser access status to e(nabled) or d(isabled).
Examples	N-TRON/Admin> system -name "Private switch" -browser disabled
	IP Configuration: Static IP Address: 192.168.1.201 Subnet Mask: 255.255.255.0 Gateway: 192.168.1.1 MAC Address: 00:07:af:fb:fa:40 System Up Time: 0 days, 17 hours, 10 mins, 56 secs Name: Private switch Contact: N-Tron Admin Location: Mobile, AL 36609 Browser Access: Disabled  Changes have been made that have not been saved
NOTES	A switch name may only contain alphanumeric, space, ':', '-', '_', and '#' characters, and may not begin with a number, space, or underscore. A name with embedded space characters must be enclosed in quotes.

(Revised 8/5/2009) Page 117 of 133

### **VLAN Addition and Deletion Example**

The screen capture below is the factory default VLAN configuration.

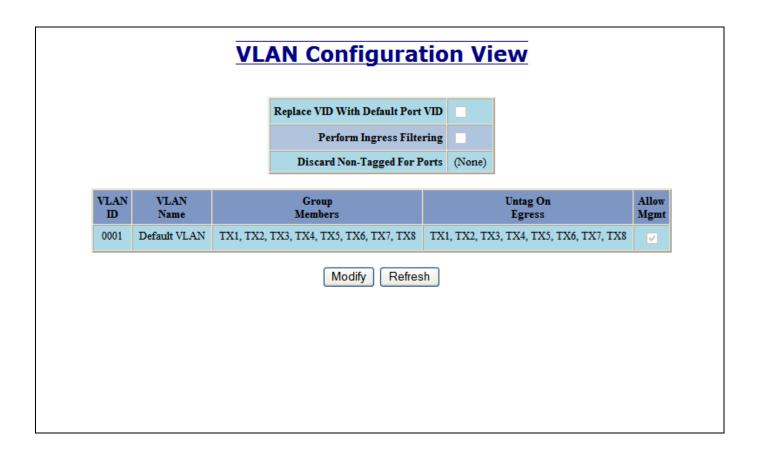

Clicking on the "Modify" button allows one to add a new VLAN:

(Revised 8/5/2009) Page 118 of 133


	VLAN Configuration						
	1	Replace VID Tag With Default Port VID					
		Perform Ingress Filtering					
		Discoul New Toward Fee Dente	□TX1 □TX2 □TX3 □TX4				
		Discard Non-Tagged For Ports	□TX5 □TX6 □TX7 □TX8				
		Update	Cancel				
	_						
		VLAN (	Groups				
VLAN ID	VLAN Name	Group Members	Untag On Egress	Allow Mgmt	Delete		
0001	Default VLAN	TX1, TX2, TX3, TX4, TX5, TX6, TX7, T	X8 TX1, TX2, TX3, TX4, TX5, TX6, TX7	, TX8 🗸			
Add							
Done Refresh							

When creating a new VLAN, a numeric ID is required, Name is entered. Note that N-Ring VLAN is a reserved name with a special meaning. Choices such as "Allow Management" and "Change PVID of Member Ports" are made at this time as well as the ports which are going to belong to the new VLAN. Additionally, the ports may be "Untagged on Egress".

(Revised 8/5/2009) Page 119 of 133

Tagged	VLA	N G	roup	Con	figuratio	<u>on</u>	
		ID	2				
		Name	New VL	AN			
	Allow Man	gement					
	Change l Memb	VID Of er Ports	~				
		Gı	roup Ports				
	Por No		Group Member	Untag On Egress			
	01	TX1					
	02	TX2					
	03	TX3	<b>V</b>				
	04	TX4	<b>▽</b>				
	05	TX5					
	06	TX6					
	07	TX7					
	08	TX8					
		Upda	te Car	ncel			


The result of add is a "New VLAN". In this case, it does not overlap the "Default VLAN" ports.

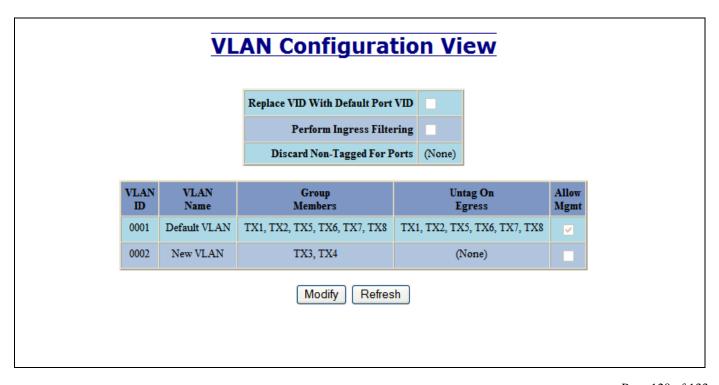

(Revised 8/5/2009) Page 120 of 133

The ports of "New VLAN" may be added back to "Default VLAN" to create overlapping VLANs.

Note: If there are multiple ports on different VLANs, the 708 will apply the static multicast address to the lowest VLAN-ID that is associated with one of the ports assigned to the static multicast address. If the lowest VLAN-ID contains all the ports assigned to the static multicast address (an umbrella VLAN), it will function for all those ports with no problems. This can be achieved with overlapping VLANs.

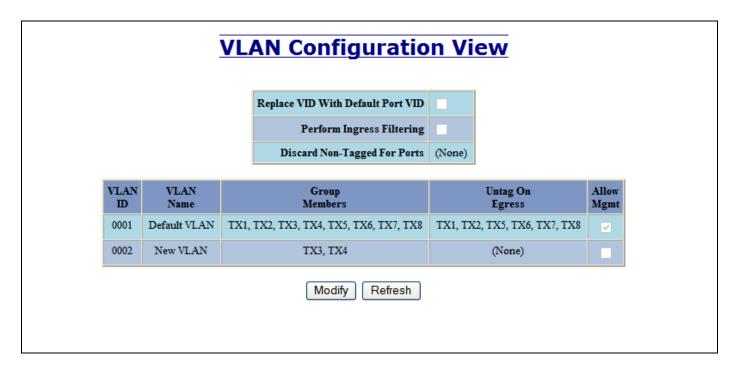


But notice that the ports in "New VLAN" are not marked as "Untag on Egress" and are thus still tagged.

And the "New VLAN" may be deleted when it is no longer required:

(Revised 8/5/2009) Page 121 of 133

	VLAN Configuration						
		Replace VID Tag With Default Port VID					
		Perform Ingress Filtering					
Discard Non-Tagged For Ports  TX1 TX2 TX3 TX4  TX5 TX6 TX7 TX8							
		Update	Cano	cel			
		VLAN	Group	s			
VLAN ID	VLAN Name			Untag On Egress	Allow Mgmt	Delete	
0001	Default VI	AN TX1, TX2, TX3, TX4, TX5, TX6, TX	7, TX8	TX1, TX2, TX5, TX6, TX7, TX8	V		
0002	New VLA	N TX3, TX4		(None)		Delete	
Add							
Add	Done Refresh						

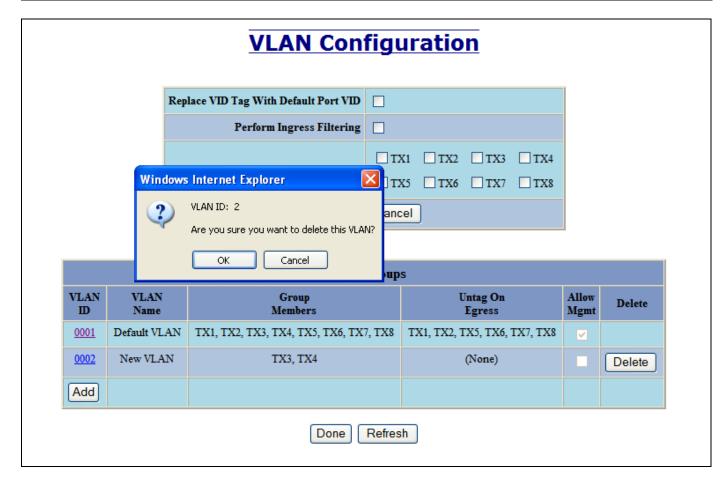

(Revised 8/5/2009) Page 122 of 133

And the "New VLAN" is removed. Note that the new configuration of the switch must be saved if the configuration must survive a power cycle.

	Replac	e VID Tag With Default Port VID				
		Perform Ingress Filtering				
		Discard Non-Tagged For Ports	□TX1	□TX2 □TX3 □TX4		
		Discard Non-Lagged For Forts	□TX5	□TX6 □TX7 □TX8		
		Update	Cancel			
		VLAN (	Groups			
	AN me	Group Members		Untag On Egress	Allow Mgmt	
ID Na			X7, TX8		Mgmt	
ID Na	me	Members	TX7, TX8	Egress	Mgmt	

(Revised 8/5/2009) Page 123 of 133

### **VLAN Configuration Examples**

A VLAN is an administratively configured LAN segment that limits the traffic in multiple broadcast domains. Instead of physically reconnecting a device to a different LAN, network administrators can accomplish this task by configuring a VLAN compliant switch to create logical network segments.

Tagged VLAN allows switch segmentation to span across multiple managed switches. This type of VLAN is ideal for LANs that consist of various types of communication groups such as Office LANs, Controls Systems, and IP Cameras. When used properly, it will effectively isolate two or more groups from each other in a logical manner. This means that Broadcast, Multicast, and Unicast frames in one VLAN will not interfere with another isolated VLAN group.

Example 1 – Basic understanding of port-based VLANs

#### **VLAN Configuration View Port Configuration View** Port Port PVID No Name Replace VID With Default Port VID 01 TX1 2 **Perform Ingress Filtering** 02 2 TX2 03 TX3 1 Discard Non-Tagged For Ports (None) 04 TX4 1 VLAN VLAN Untag On Allow Group 05 TX5 1 ID Name Members Egress Mgmt 06 TX6 1 0001 Default VLAN TX3, TX4, TX5, TX6, TX7, TX8 TX3, TX4, TX5, TX6, TX7, TX8 <u>07</u> TX7 1 0002 VLAN-2 TX1, TX2 TX1, TX2 TX8 1

Receiving	Tagged VID	Destination	Transmitting	Notes
Port #	in packet	Address	Port #s	
TX1	Untagged	MAC on port TX2	TX2	Unicast Traffic
TX1	Untagged	Unknown MAC	TX2	Floods VLAN 2
TX1	VID 4	MAC on port TX2		Packet Discarded
TX3	Untagged	MAC on port TX5	TX5	Unicast Traffic
TX3	Untagged	Unknown MAC	TX4-TX8	Floods VLAN 1
TX3	VID 4	MAC on port TX6		Packet Discarded

(Revised 8/5/2009) Page 124 of 133

Replace VID With Default Port VID	
Perform Ingress Filtering	
Discard Non-Tagged For Ports	TX1, TX2, TX3, TX5, TX6, TX7, TX8

VLAN ID	VLAN Name	Group Members	Untag On Egress	Allow Mgmt
0001	Default VLAN	TX3, TX5, TX6, TX7, TX8	(None)	
0002	VLAN-2	TX1, TX2	(None)	
0003	VLAN-3	TX4	(None)	~

Port No	Port Name	PVID
<u>01</u>	TX1	1
<u>02</u>	TX2	1
<u>03</u>	TX3	1
<u>04</u>	TX4	3
<u>05</u>	TX5	1
<u>06</u>	TX6	1
<u>07</u>	TX7	1
08	TX8	1

Receiving Port #	Tagged VID in packet	Destination Address	Transmitting Port #s	Notes
TX1	Untagged	MAC on port TX2		Packet Discarded
TX1	VID 2	MAC on port TX2	TX2	Unicast Traffic
TX1	VID 4	MAC on port TX2		Packet Discarded
TX1	VID 2	MAC on port TX5	TX2	Floods VLAN 2
TX3	Untagged	MAC on port TX1		Packet Discarded
TX3	VID 1	MAC on port TX6	TX6	Unicast Traffic
TX3	VID 1	Unknown MAC	TX5-TX8	Floods VLAN 1
TX3	VID 4	MAC on port TX8		Packet Discarded

(Revised 8/5/2009) Page 125 of 133

Replace VID With Default Port VID	
Perform Ingress Filtering	
Discard Non-Tagged For Ports	(None)

VLAN ID	VLAN Name	Group Members	Untag On Egress	Allow Mgmt
0001	Default VLAN	TX3, TX4, TX5, TX6, TX7, TX8	(None)	V
0002	VLAN-2	TX1, TX2	(None)	

Port No	Port Name	PVID
<u>01</u>	TX1	2
<u>02</u>	TX2	2
<u>03</u>	TX3	1
<u>04</u>	TX4	1
<u>05</u>	TX5	1
<u>06</u>	TX6	1
<u>07</u>	TX7	1
08	TX8	1

Receiving	Tagged VID	Destination	Transmitting	Notes
Port #	in packet	Address	Port #s	
TX1	Untagged	MAC on port TX2	TX2	Adds VID 2 to packet
TX1	VID 2	MAC on port TX2	TX2	Unicast Traffic
TX1	VID 4	MAC on port TX2		Packet Discarded
TX1	VID 2	Unknown MAC	TX2	Floods VLAN 2
TX3	Untagged	Unknown MAC	TX4-TX8	Adds VID 1 to packet & Floods VLAN 1
TX3	VID 1	MAC on port TX6	TX6	Unicast Traffic
TX3	VID 1	Unknown MAC	TX4-TX8	Floods VLAN 1
TX3	VID 4	MAC on port TX7		Packet Discarded

(Revised 8/5/2009) Page 126 of 133

Replace VID With Default Port VID	
Perform Ingress Filtering	
Discard Non-Tagged For Ports	(None)

VLAN ID	VLAN Name	Group Members	Untag On Egress	Allow Mgmt
0001	Default VLAN	TX3, TX4, TX5, TX6, TX7, TX8	TX3, TX4, TX5, TX6, TX7, TX8	V
0002	VLAN-2	TX1, TX2, TX3, TX4	TX1, TX2	

Port No	Port Name	PVID
<u>01</u>	TX1	2
<u>02</u>	TX2	2
<u>03</u>	TX3	1
<u>04</u>	TX4	1
<u>05</u>	TX5	1
<u>06</u>	TX6	1
<u>07</u>	TX7	1
08	TX8	1

Receiving Port #	Tagged VID in packet	Destination Address	Transmitting Port #s	Notes
TX1	Untagged	MAC on port TX2	TX2	Unicast Traffic
TX1	Untagged	MAC on port TX3	TX3	Adds VID 2 in the packet
TX1	VID 4	MAC on port TX2		Packet Discarded
TX1	VID 4	MAC on port TX3		Packet Discarded
TX1	VID 2	MAC on port TX2	TX2	Strips VID off packet
TX3	Untagged	MAC on port TX6	TX6	Unicast Traffic
TX3	Untagged	Unknown MAC	TX4-TX8	Floods VLAN 1
TX3	VID 4	MAC on port TX5		Packet Discarded
TX3	VID 4	MAC on port TX4		Packet Discarded
TX3	VID 2	MAC on port TX4	TX4	Does not strip VID off packet
TX3	VID 2	MAC on port TX1	TX1	Strips VID off packet

(Revised 8/5/2009) Page 127 of 133

Replace VID With Default Port VID	
Perform Ingress Filtering	
Discard Non-Tagged For Ports	(None)

VLAN ID	VLAN Name	Group Members	Untag On Egress	Allow Mgmt
0001	Default VLAN	(None)	(None)	
0002	VLAN-2	TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8	TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8	
0003	VLAN-3	TX2, TX3, TX4, TX5, TX6, TX7, TX8	TX2, TX3, TX4, TX5, TX6, TX7, TX8	V
0004	VLAN-4	TX1, TX2	TX1, TX2	

Port No	Port Name	PVID
<u>01</u>	TX1	4
<u>02</u>	TX2	2
<u>03</u>	TX3	3
<u>04</u>	TX4	3
<u>05</u>	TX5	3
<u>06</u>	TX6	3
<u>07</u>	TX7	3
<u>08</u>	TX8	3

Receiving Port #	Tagged VID in packet	Destination Address	Transmitting Port #s	Notes
TX1	Untagged	MAC on port TX2, VID=4	TX2	Unicast Traffic
TX1	Untagged	MAC on port TX3	TX2	Floods VLAN 4
TX1	VID 4	MAC on port TX2, VID=4	TX2	Strips VID off packet
TX1	VID 4	Unknown MAC	TX2	Strips VID off packet & Floods VLAN 4
TX2	Untagged	MAC on port TX1, VID=2	TX1	Unicast Traffic
TX2	Untagged	MAC on port TX5, VID=2	TX5	Unicast Traffic
TX2	VID 2 or 3	MAC on port TX5, VID=2 and 3	TX5	Strips VID off packet (or floods if MAC is unknown for VID)
TX2	Untagged	Unknown MAC	TX1, TX3-TX8	Floods VLAN 2
TX3	Untagged	MAC on port TX1, VID=3	TX2, TX4-TX8	Floods VLAN 3
TX3	Untagged	MAC on port TX2, VID=3	TX2	Unicast Traffic
TX3	Untagged	MAC on port TX5, VID=3	TX5	Unicast Traffic
TX3	VID 2 or 3	MAC on port TX2, VID=2 and 3	TX2	Strips VID off packet (or floods if MAC is unknown for VID)

(Revised 8/5/2009) Page 128 of 133

Replace VID With Default Port VID	
Perform Ingress Filtering	
Discard Non-Tagged For Ports	(None)

VLAN ID	VLAN Name	Group Members	Untag On Egress	Allow Mgmt
0001	Default VLAN	(None)	(None)	
0002	VLAN-2	TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8	TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8	
0003	VLAN-3	TX2, TX3, TX4, TX5, TX6, TX7, TX8	TX2, TX3, TX4, TX5, TX6, TX7, TX8	V
0004	VLAN-4	TX1, TX2	TX1, TX2	

Port No	Port Name	PVID
<u>01</u>	TX1	4
<u>02</u>	TX2	2
<u>03</u>	TX3	3
<u>04</u>	TX4	3
<u>05</u>	TX5	3
<u>06</u>	TX6	3
<u>07</u>	TX7	3
08	TX8	3

Top of Form Bottom of Form

Static Multicast Group Address Filters				
Multicast Address	Port List	VLAN ID		
01:00:00:00:00:01	TX1, TX2, TX3, TX4, TX5, TX6, TX7, TX8	2		
01:00:00:00:00:02	TX1, TX6, TX8	3		

Receiving	Tagged VID	Destination	Transmitting	Notes
Port #	in packet	Address	Port #s	
TX1	Untagged	01:00:00:00:00:01	TX2	Goes to ports TX1-TX8, but TX1 can only send to TX2 (VLAN 4)
TX3	Untagged	01:00:00:00:00:02	TX6, TX8	Goes to ports TX2, TX6-TX8 (VLAN 3) but filter keeps it on ports TX6 and TX8 only
TX2	Untagged	01:00:00:00:00:01	TX1,TX3-TX8	Goes to ports TX1-TX8, but won't go back out the port it came in on
TX2	Untagged	01:00:00:00:00:02	TX1,TX3-TX8	Goes to ports TX1,TX3-TX8
TX3	Untagged	01:00:00:00:00:01	TX2, TX4-TX8	Goes to ports TX2, TX4-TX8
TX6	Untagged	01:00:00:00:00:02	TX8	Goes to port TX8
TX3	Untagged	01:00:00:00:00:02	TX6, TX8	Goes to ports TX6 and TX8

Note: If there are multiple ports on different VLANs, the 708 will apply the static multicast address to the lowest VLAN-ID that is associated with one of the ports assigned to the static multicast address. If the lowest VLAN-ID contains all the ports assigned to the static multicast address (an umbrella VLAN), it will function for all those ports with no problems. This can be achieved with overlapping VLANs.

For further information and examples on overlapping vlans, see: http://www.n-tron.com/pdf/OverlappingPortVLAN.pdf

(Revised 8/5/2009) Page 129 of 133

### **KEY SPECIFICATION – 708TX, 708FX2, 708FXE2**

#### **Switch Properties**

Number of MAC Addresses: 8,000

Aging Time: Programmable

Latency Type: 2.9 µs

Switching Method: Store & Forward

**Physical** 

 Height:
 2.27" (5.8cm)

 Width:
 6.0" (15.3cm)

 Depth:
 3.75" (9.6cm)

 Weight (max):
 1.7 lbs (0.8kg)

Din-Rail mount: 35mm

**Electrical** 

Redundant Input Voltage: 10-30VDC (Regulated)
708FX(E)2 Input Current (max): 330mA max. @ 24VDC
708TX Input Current (max): 250mA max. @ 24VDC
Inrush @ 24VDC: 11.8A/0.1ms @ 24VDC

Input Ripple: Less than 100 mV

N-TRON Power Supply: NTPS-24-1.3 (1.3 Amp@24VDC) (NOTE: Not appropriate for use with

M12, POE, and HV models.)

**Environmental** Connectors

Operating Temperature: -40°C to 85°C 10/100BaseTX: (8) RJ-45 Copper Ports (708TX) and (6) RJ-45 Copper Ports (708FX2)

Storage Temperature: -40°C to 85°C 100BaseFX: (2) SC or ST Duplex Ports (716FX2)

Operating Humidity: 5% to 95% Recommended Wiring Clearance:

(Non Condensing) Front: 4" (10.16 cm)

Operating Altitude 0 to 10,000 ft. Side: 1" (2.54 cm)

Shock and Vibration Network Media

(bulkhead mounting)

Shock: 200g @ 10ms 10BaseT: >Cat3 Cable 100BaseTX: >Cat5 Cable

Vibration/Seismic: 50g, 5-200Hz, Triaxial minimum length: 1 meter

maximum length: 100 meters

Reliability 100BaseFX

*Multimode:* 50-62.5/125μm

MTBF: >2 Million Hours 100BaseFXE

Singlemode: 7-10/125µm

**Warranty:** 3 years from the date of purchase.

#### 100 Mb Fiber Transceiver Characteristics

Fiber Length	2km*	15km**	40km**	80km**
TX Power Min/Max	-19dBm/-14dBm	-15dBm/-7dBm	-5dBm/0dBm	-5dBm/0dBm
<b>RX</b> Sensitivity Max	-32dBm	-34dBm	-34dBm	-34dBm
Wavelength Min/Max	1310nm	1310nm	1310nm	1550nm

^{*} Multimode Fiber Optic Cable

(Revised 8/5/2009) Page 130 of 133

^{**} Singlemode Fiber Optic Cable

### **KEY SPECIFICATION – 716TX, 716FX2, 716FXE2**

#### **Switch Properties**

Number of MAC Addresses: 8.000

Programmable Aging Time:

Latency Type:  $2.6 \mu s$ 

Switching Method: Store & Forward

**Physical** 

Height: 2.27" (5.76 cm) Width: 8.25" (20.95 cm) Depth: 475" (12.06 cm) *Weight (max):* 3.3 lbs (1.49 kg)

Din-Rail mount: 35mm

Electrical

Redundant Input Voltage: 10-30VDC (Regulated) Input Current (max): 620mA max. @ 24VDC

-HV (High Voltage Option)

Redundant Input Voltage: 40-160VDC (Regulated) *Input Current (max):* 160mA max. @ 124VDC

Less than 100 mV Input Ripple:

*N-TRON Power Supply:* NTPS-24-1.3 (1.3 Amp@24VDC) (NOTE: Not appropriate for use with

M12, POE, and HV models.)

**Environmental Connectors** 

10/100BaseTX: Operating Temperature: -40°C to 70°C (16) RJ-45 Copper Ports (716TX)

Storage Temperature: -40°C to 85°C (14) RJ-45 Copper Ports (716FX2)

100BaseFX: (2) SC or ST Duplex Ports (716FX2)

5% to 95% (Non Condensing) Operating Humidity:

Operating Altitude 0 to 10,000 ft.

4" (10.16 cm) **Shock and Vibration** 

1" (2.54 cm) Side: (bulkhead mounting)

Shock: 200g @ 10ms

Vibration/Seismic: 50g, 5-200Hz, Triaxial

10BaseT: >Cat3 Cable *100BaseTX*: >Cat5 Cable

Network Media

Reliability minimum length: 1 meter

maximum length: 100 meters *MTBF*: >2 Million Hours

100BaseFX

Multimode: 50-62.5/125µm

**Recommended Wiring Clearance:** 

Warranty: 3 years from the date of purchase. 100BaseFXE

> Singlemode:  $7-10/125 \mu m$

#### 100 Mb Fiber Transceiver Characteristics

_				
Fiber Length	2km*	15km**	40km**	80km**
TX Power Min/Max	-19dBm/-14dBm	-15dBm/-7dBm	-5dBm/0dBm	-5dBm/0dBm
RX Sensitivity Max	-32dBm	-34dBm	-34dBm	-34dBm
Wavelength Min/Max	1310nm	1310nm	1310nm	1550nm

^{*} Multimode Fiber Optic Cable

Page 131 of 133 (Revised 8/5/2009)

^{**} Singlemode Fiber Optic Cable

### **Regulatory Approvals**

### 708TX, 708FX2, 708FXE2

**Safety:** UL Listed per ANSI/ISA-12.12.01-2007 (US and Canada)

This equipment is suitable for use in Class I, Div 2, Groups A, B, C, and D or non-hazardous locations only.

DEMKO 03 ATEX II 3 G Ex nC IIC

EMI: EN61000-6-2, EN55011

FCC Title 47, Part 15, Subpart B - Class A

ICES-003 - Class A

**EMS:** EN61000-4-2 (ESD)

EN61000-4-3 (RS) EN61000-4-4 (EFT) EN61000-4-5 (Surge)

EN61000-4-6 (Conducted Disturbances)

IEC 61000-4-8 (Power-frequency Magnetic Field) IEC 61000-4-11 (Voltage Dips and Interruptions)











### 716TX, 716FX2, 716FXE2

Safety: UL listed per ANSI/ISA-12.12.01-2007 (US and Canada)

This equipment is suitable for use in Class I, Div 2, Groups A, B, C, and D or non-hazardous locations only.

EMI: FCC Title 47, Part 15, Subpart B - Class A

ICES-003 - Class A

EN 50155 EMS:

> EN61000-4-2 (ESD) EN61000-4-3 (RS) EN61000-4-4 (EFT) EN61000-4-5 (Surge)

EN61000-4-6 (Conducted Disturbances)









Page 132 of 133 (Revised 8/5/2009)

#### **N-TRON Limited Warranty**

N-TRON, Corp. warrants to the end user that this hardware product will be free from defects in workmanship and materials, under normal use and service, for the applicable warranty period from the date of purchase from N-TRON or its authorized reseller. If a product does not operate as warranted during the applicable warranty period, N-TRON shall, at its option and expense, repair the defective product or part, deliver to customer an equivalent product or part to replace the defective item, or refund to customer the purchase price paid for the defective product. All products that are replaced will become the property of N-TRON. Replacement products may be new or reconditioned. Any replaced or repaired product or part has a ninety (90) day warranty or the remainder of the initial warranty period, whichever is longer. N-TRON shall not be responsible for any custom software or firmware, configuration information, or memory data of customer contained in, stored on, or integrated with any products returned to N-TRON pursuant to any warranty.

OBTAINING WARRANTY SERVICE: Customer must contact N-TRON within the applicable warranty period to obtain warranty service authorization. Dated proof of purchase from N-TRON or its authorized reseller may be required. Products returned to N-TRON must be pre-authorized by N-TRON with a Return Material Authorization (RMA) number marked on the outside of the package, and sent prepaid and packaged appropriately for safe shipment. Responsibility for loss or damage does not transfer to N-TRON until the returned item is received by N-TRON. The repaired or replaced item will be shipped to the customer, at N-TRON's expense, not later than thirty (30) days after N-TRON receives the product. N-TRON shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to N-TRON for repair, whether under warranty or not.

ADVANCE REPLACEMENT OPTION: Upon registration, this product qualifies for advance replacement. A replacement product will be shipped within three (3) days after verification by N-TRON that the product is considered defective. The shipment of advance replacement products is subject to local legal requirements and may not be available in all locations. When an advance replacement is provided and customer fails to return the original product to N-TRON within fifteen (15) days after shipment of the replacement, N-TRON will charge customer for the replacement product, at list price.

WARRANTIES EXCLUSIVE: IF AN N-TRON PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER'S SOLE REMEDY FOR BREACH OF THAT WARRANTY SHALL BE REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT N-TRON'S OPTION. TO THE FULL EXTENT ALLOWED BY LAW, THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, TERMS, OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES, TERMS, OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, SATISFACTORY QUALITY, CORRESPONDENCE WITH DESCRIPTION, AND NON-INFRINGEMENT, ALL OF WHICH ARE EXPRESSLY DISCLAIMED. N-TRON NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS. N-TRON SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT OR MALFUNCTION IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLECT, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO OPEN, REPAIR OR MODIFY THE PRODUCT, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, POWER CUTS OR OUTAGES, OTHER HAZARDS, OR ACTS OF GOD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW, N-TRON ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF N-TRON OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT N-TRON'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

DISCLAIMER: Some countries, states, or provinces do not allow the exclusion or limitation of implied warranties or the limitation of incidental or consequential damages for certain products supplied to consumers, or the limitation of liability for personal injury, so the above limitations and exclusions may be limited in their application to you. When the implied warranties are not allowed to be excluded in their entirety, they will be limited to the duration of the applicable written warranty. This warranty gives you specific legal rights which may vary depending on local law.

GOVERNING LAW: This Limited Warranty shall be governed by the laws of the State of Alabama, U.S.A

(Revised 8/5/2009) Page 133 of 133