

## groov EPIC UPDATE CHECKLIST

Here's a basic checklist for updating your *groov* EPIC processor. Use the items needed for your application and ignore the ones you don't use (for example, ignore Node-RED items if you don't use Node-RED).

**For detailed steps**, see the *groov EPIC User's Guide*.

### You will need:

- New GRV-EPIC-PR1 firmware file from [manage.groov.com](http://manage.groov.com)  
(This is a large file that includes both firmware and software.)
- Computer or laptop
- GRV-EPIC-PR1 processor

### Resources you may need:

- *groov EPIC User's Guide*
- *PAC Control User's Guide*
- *groov View User's Guide*

## CHECKLIST (UPDATING FROM VERSION 1.3.2 OR LOWER)

### Before the update (Important!)

- Back up your GRV-EPIC-PR1 with default backup settings (*groov* Manage > Maintenance > Backup).
- For PAC Control: Back up your control strategy and persistent variables.
- For CODESYS: Back up your control program.
- Back up your *groov* View project (*groov* View Build mode > File).
- Back up your Ignition Edge project. Note your Edge license number and then deactivate the license (Ignition Edge Gateway > Configure).
- Back up your Node-RED project and note all Node-RED nodes you installed (*groov* Manage > Node-RED).
- Download and save any files you uploaded through *groov* Manage (System > Files).
- Back up and make notes of any Shell account settings or programs installed.

### During the update

- Install the firmware update file (*groov* Manage > Maintenance > Update).
- When the update is finished, create the first admin user account.
- Restore your GRV-EPIC-PR1 from the backup you made (*groov* Manage > Maintenance > Restore).
- Wait for the EPIC to reboot, then log in with an admin account from the backup.

### After the update

- If updating from version 1.2.2 or lower, check Appendix F in the *groov EPIC User's Guide* for licensing changes.

- For PAC Control: Download your strategy and persistent variables. Run the strategy.
- For CODESYS: Download your control program. Run the program.
- Restore your *groov* View project (*groov* View Build mode > File). Switch to *groov* View and test the pages.
- Restore your Ignition Edge project and reactivate your license (Ignition Edge Gateway > Configure).
- Install your missing Node-RED nodes (*groov* Manage > Node-RED).
- Upload any files you saved that were uploaded through *groov* Manage (System > Files).
- Restore (if necessary) your Shell user account, files and configuration.

## CHECKLIST (UPDATING FROM VERSION 1.4.0 OR HIGHER)

### Before the update (Important!)

- Set backup parameters for your GRV-EPIC-PR1 (*groov* Manage > Maintenance > Backup).
- For PAC Control: Back up your control strategy and persistent variables.
- For CODESYS: Back up your control program.
- Note all Node-RED nodes you installed (*groov* Manage > Node-RED).
- Back up your *groov* View project (*groov* View Build mode > File).
- Back up your Ignition Edge project. Note your Edge license number and then deactivate the license (Ignition Edge Gateway > Configure).
- Download and save any files you uploaded through *groov* Manage (System > Files).
- Back up and make notes of any Shell account settings or programs installed.

### During the update

- Install the firmware update file (*groov* Manage > Maintenance > Update). The update is installed and the GRV-EPIC-PR1 is restored based on your backup parameters.
- Wait for the EPIC to reboot, then enter the username and password for an admin account that was included in the backup.

### After the update

- For PAC Control: Download your strategy and persistent variables. Run the strategy.
- For CODESYS: Download your control program. Run the program.
- Install your missing Node-RED nodes (*groov* Manage > Node-RED).
- Restore your *groov* View project (*groov* View Build mode > File). Switch to *groov* View and test the pages.
- Restore your Ignition Edge project and reactivate your license (Ignition Edge Gateway > Configure).
- Upload any files you saved that were uploaded through *groov* Manage (System > Files).
- Restore (if necessary) your Shell user account, files and configuration.