


IMPORTANT

Ensure the tabs on the back of the power supply are latched over the notches of the chassis. For complete instructions, see the *groov* EPIC Power Supplies, Converters, and Adapters Data Sheet (form 2246).

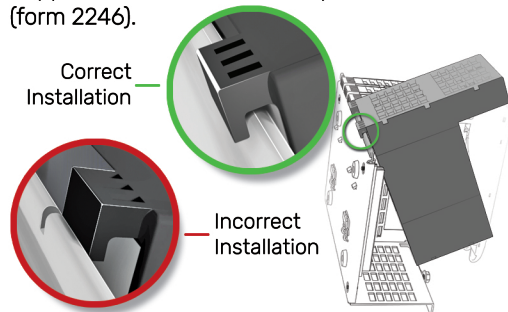


Never handle the *groov* EPIC processor by the LCD display:


- Do NOT push or pull on the LCD display when mounting or un-mounting the processor.
- Do NOT carry or lift the processor by the LCD display.

MOUNTING

- 1 Pull open the LCD display using the handgrip on the bottom.
- 2 Align the processor's notch to the power supply's tab.
- 3 Slowly guide the processor to the connectors. When they touch, gently jiggle the processor until the pins seat into the connector holes on the chassis.

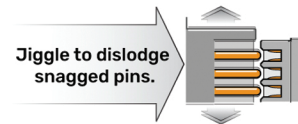


Do NOT rotate or rock.

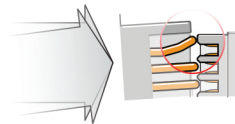


- 4 Push the processor (not the LCD display) all the way in.

UN-MOUNTING

- 1 Pull open the LCD display.
- 2 Power off the unit and remove the retention screws.
- 3 Hold the processor by the body with both hands.
- 4 Pull the processor straight out.

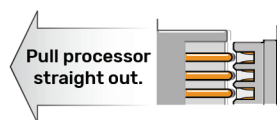

Do NOT rotate or rock.

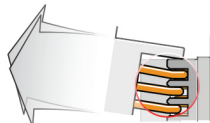

For more detailed instructions, see "Mounting the *groov* EPIC Processor" in Chapter 3 of the *groov* EPIC User's Guide (form 2267).

You can also watch a video that explains how to mount the *groov* EPIC processor by scanning the following QR code with the camera on your mobile phone:

