

IMPORTANT


Never handle the *groov* EPIC processor by the LCD screen:

- Don't push on the LCD screen when inserting the processor.
- Don't pull on the LCD screen when removing the processor.
- Don't carry or lift the processor by the LCD screen.


When inserting or removing the processor, open the LCD screen and always handle the processor by the body, preferably with two hands.

INSERTING

- 1 Open the LCD screen.
- 2 Align processor's notch to power supply's tab.
- 3 Slowly guide the processor to the connectors. When they touch, jiggle the processor until pins seat into connector holes.

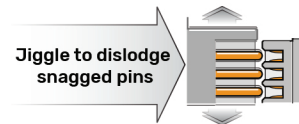

Do NOT rotate or rock.

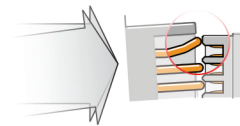

- 4 Push the processor (not the LCD screen) all the way in.


REMOVING

- 1 Open the LCD screen.
- 2 Hold the processor by the body with both hands.
- 3 Pull the processor straight out.



- Do not use a rocking motion.
- Do not rotate the processor.

Do NOT rotate or rock.

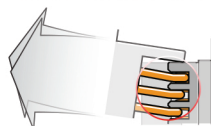

For more detailed instructions, see the topic, "Inserting the *groov* EPIC Processor" in Chapter 3: "Assembling your *groov* EPIC" of the *groov* EPIC User's Guide (form 2267).

You can also view a video that explains how to insert the *groov* EPIC processor by scanning the following QR code with the camera on your mobile phone:

